

Trim Panel: Service and Repair

REMOVAL

1. Using a trim stick (C-4755), pry courtesy lamp from door trim.
2. Disconnect wire connector from courtesy lamp.
3. If equipped, remove screws attaching door assist handle to inner door panel.
4. If equipped, remove screw attaching door pull cup to inner door panel.
5. If equipped, remove screws attaching trim panel to door from below map pocket.
6. If equipped, remove window crank.
7. Using a trim stick, remove screw cover from switch panel.
8. Remove screws attaching switch panel to door trim.
9. Remove power accessory switch from door trim.
10. Disconnect power switch from wire connector.
11. If equipped, using a small, flat bladed pry tool, remove memory seat/mirror switch and disconnect wire connector.
12. If equipped, remove screw holding door trim to door panel from behind inside latch release handle.
13. Disengage clips attaching door trim to door frame around perimeter of panel.
14. Lift trim panel upward to disengage flange from inner belt molding at top of door.
15. Tilt top of trim panel away from door to gain access to latch linkage.
16. Disengage clip attaching linkage rod to inside latch release handle.
17. Separate linkage rod from latch handle.
18. Remove front door trim panel from vehicle.

INSTALLATION

1. Hold top of trim panel away from door to gain access to latch linkage.
2. Place linkage rod in position on latch handle.
3. Engage clip to hold linkage rod to inside latch release handle.
4. Place front door trim panel in position on door.
5. Install trim panel into inner belt molding at top of door.
6. Install clips to attach door trim to door frame around perimeter of panel.
7. If equipped, install screw to attach door trim to door panel behind inside latch release handle.
8. If equipped, connect power switch into wire connector.
9. Place power accessory switch in position on door trim.
10. Connect wire connector into memory seat/mirror switch and install switch into trim panel.
11. Install screws to attach accessory switch panel to door trim.
12. Install screw cover into switch panel.
13. If equipped, install window crank.
14. If equipped, install screws to attach trim panel to door inside map pocket.
15. If equipped, install screw to attach door pull cup to inner door panel.
16. If equipped, install screws to attach door assist handle to inner door panel.
17. Connect wire connector into courtesy lamp.
18. Install lamp in door trim.

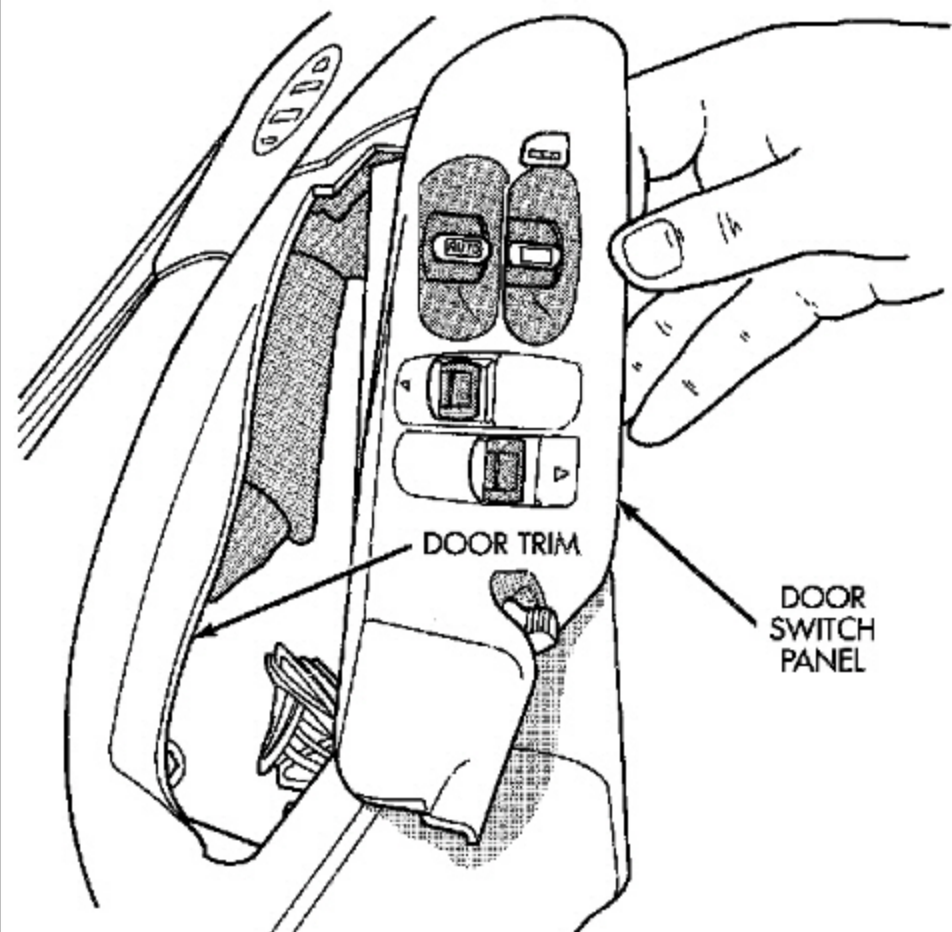


Fig. 32 Front Door Switch Panel

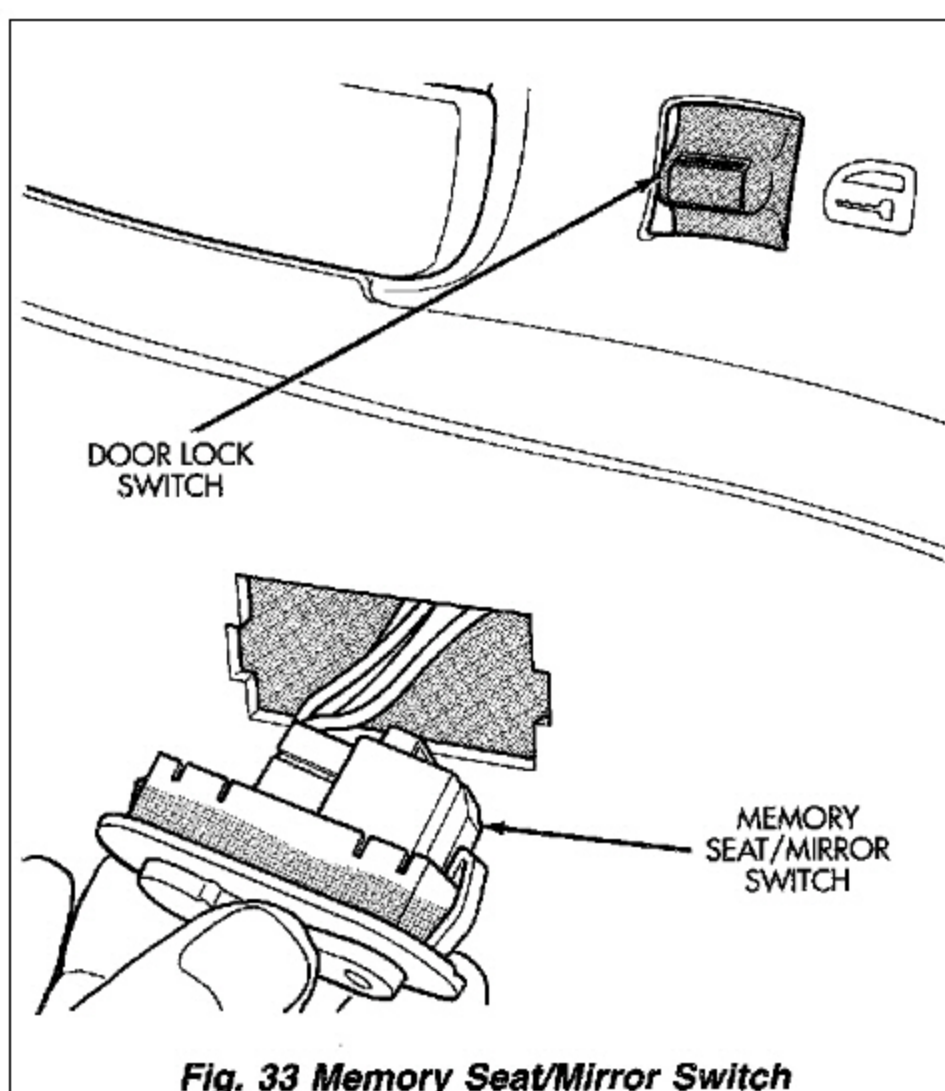


Fig. 33 Memory Seat/Mirror Switch

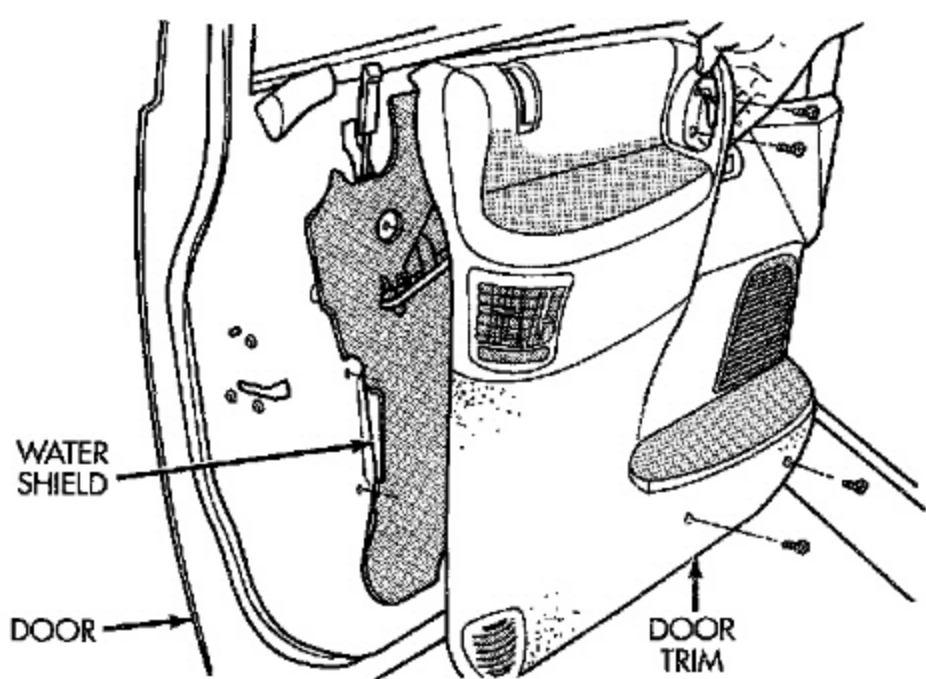


Fig. 34 Front Door Trim Panel

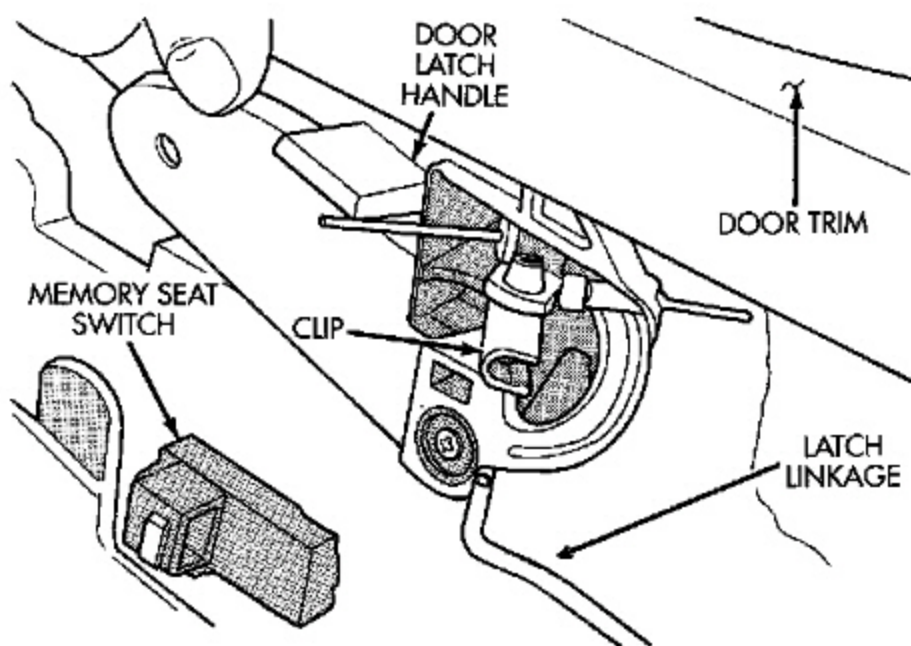


Fig. 35 Inside Door Handle Linkage