

**FUSE & CIRCUIT BREAKER I.D. (PASSENGER COMPARTMENT)****1 - 10 Amp (Red)**

Panel Illumination.

**2 - 10 Amp (Red)**

Gauge, Right High Beam Headlight, High Beam Indicator.

**3 - 20 Amp (Yellow)**

RR Wiper, Left Headlight High Beam.

**4 - 15 Amp (Blue)**

RH Park, Back-up Lights Switch & Relay, Speed Proportional Steering Module, Power Door Lock Switch Illumination, Daytime Running Light Module (Canada).

**5 - 20 Amp (Yellow)**

Power Door Lock Arm/Disarm Switches, Power Mirrors, Vanity, Dome, Map, Ignition and Trunk Lights, Sunroof, Radio, Power Antenna, Data Link Connector, Body Control Module.

**6 - 15 Amp (Blue)**

Heated Mirrors, Heated Rear Window Indicator.

**7 - 20 Amp (Yellow)**

Instrument Cluster Illumination, Park & Tail Lights.

**8 - 10 Amp (Red)**

Power Receptacle (Cigarette Lighter), Radio Amplifier, Horns.

**9 - 15 Amp (Blue)**

Power Door Lock Motors (Body Control Module).

**10 - Not Used**

Not Used.

**11 - 10 Amp (Red)**

Radio.

**12 - 10 Amp (Red)**

Left Headlight Low Beam.

**13 - Spare Fuse**

Not Used.

**14 - Spare Fuse**

Not Used.

**15 - Spare Fuse**

Not Used.

**16 - Spare Fuse**

Not Used.

**RELAY IDENTIFICATION (PASSENGER COMPARTMENT)**

- **A** - Door Unlock Relay
- **B** - Door Lock Relay
- **C** - Daytime Running Light Relay
- **D** - Combination Flasher Relay
- **E** - Left Front Door Unlock Relay
- **F** - Rear Blower Relay
- **G** - ASB Relay
- **H** - EBL Relay
- **I** - Not Used
- **J** - Park Lamp Relay
- **K** - Speaker Power Relay
- **L** - Horn Relay
- **M** - Courtesy Lamp Relay