

2005 CR-V - Maintenance Schedule for Severe Conditions

90,000 miles/ 144,000 km/ ---

Service at the indicated distance or time, whichever comes first. Use this schedule if the vehicle is driven MAINLY in Canada or in any of the following conditions. If only OCCASIONALLY driven in these conditions, use the Normal Conditions schedule.

Severe Driving Conditions

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot (over 90 °F/32 °C) conditions.
- Extensive idling or long periods of stop-and-go driving, such as a taxi or a commercial delivery vehicle.
- Trailer towing, driving with a car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

Do the items in parts A, B, C, D, E, F, G, H, I, J, and K as required for the mileage/time interval listed.

NOTE: According to state and federal regulations, failure to do the maintenance items marked with an asterisk (*) will not void the customer's emissions warranties. However, Honda recommends that all maintenance services be done at the recommended intervals to ensure long-term reliability.

- Replace engine oil every 5,000 miles (8,000 km) or 6 months.
- Engine oil capacity without oil filter: 4.0 L (4.2 US qt).
- Replace engine oil filter every 10,000 miles (16,000 km) or 1 year.
- Engine oil capacity with oil filter: 4.2 L (4.4 US qt).
- Check front and rear brakes every 10,000 miles (16,000 km) or 1 year.
 - Check pads and discs for wear (thickness), damage, and cracks.
 - Check calipers for damage, leak, and tightness of mount bolts.
- Lubricate all hinges, locks, and latches every 10,000 miles (16,000 km) or 1 year.
- Rotate tires, and check tire inflation and condition every 10,000 miles (16,000 km).
- Follow the pattern shown in the Owner's Manual.
- Inspect tie-rod ends, steering gearbox, and gearbox boots every 10,000 miles (16,000 km) or 1 year.
 - Check rack grease and steering linkage.
 - Check boots for damage or leaking grease.
 - Check fluid lines for damage or leaks.
- Inspect suspension components every 10,000 miles (16,000 km) or 1 year.
 - Check bolts for tightness.
 - Check condition of ball joint boots for deterioration and damage.
- Inspect driveshaft boots every 10,000 miles (16,000 km) or 1 year.
- Check boots for cracks and boot bands for tightness.
- Replace air cleaner element every 30,000 miles (48,000 km).
- Under dusty conditions, otherwise use the Normal Conditions schedule.
- Inspect drive belt, every 30,000 miles (48,000 km) or 2 years.
- Look for cracks and damage, then check the position of the drive belt auto-tensioner indicator .
- Replace dust and pollen filter every 30,000 miles (48,000 km) or 2 years.
 - Replace the filter as often (at 15,000 miles/24,000 km intervals) if the vehicle is driven mostly in urban areas that have high concentrations of soot in the air from industry and diesel-powered vehicles.
 - Replace the filter whenever airflow from the heating and cooling system is less than normal.
- Replace automatic transmission fluid at 60,000 miles (96,000 km) or 3 years, then replace every 30,000 miles (48,000 km) or 2 years.
- Capacity: 2.9 L (3.1 US qt) for 2WD, 3.1 L (3.3 US qt) for 4WD, use Honda ATF-Z1.