


Turn Signals: Service and Repair


Front Turn Signals, Removing and Installing

Front Turn Signals, Removing And Installing

NOTE: Turn signals can be removed with headlight assemblies installed.

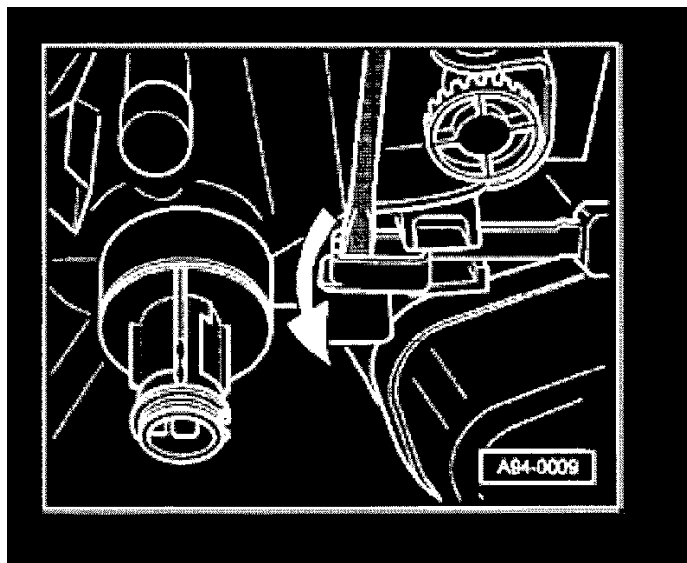

- Carefully press out release lever toward rear using screwdriver. The position of the release lever depends on the headlight version:
 - Standard headlights: release lever is attached to headlight housing
 - Three-way headlights: release lever is attached to turn signal

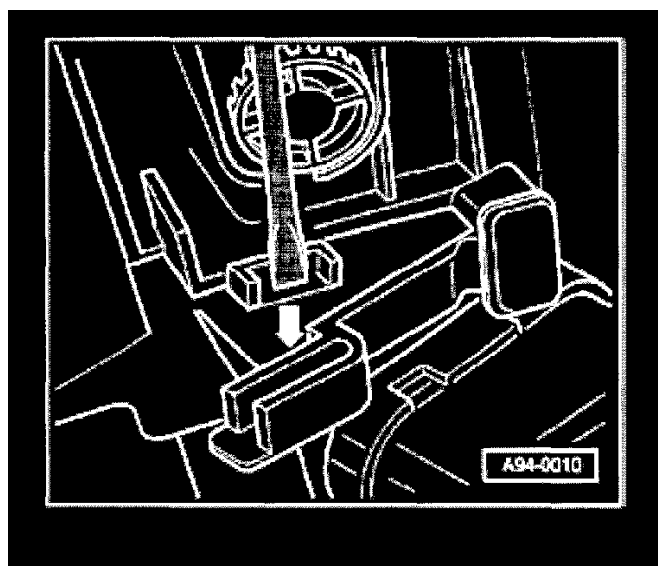

- Press catch (lever) slightly down (arrow) and push turn signal lens out toward front.
- Disconnect harness connector and rotate and remove bulb assembly.