


## Turn Signals: Service and Repair


### Front Turn Signals, Removing and Installing

#### Front Turn Signals, Removing And Installing

**NOTE:** Turn signals can be removed with headlight assemblies installed.

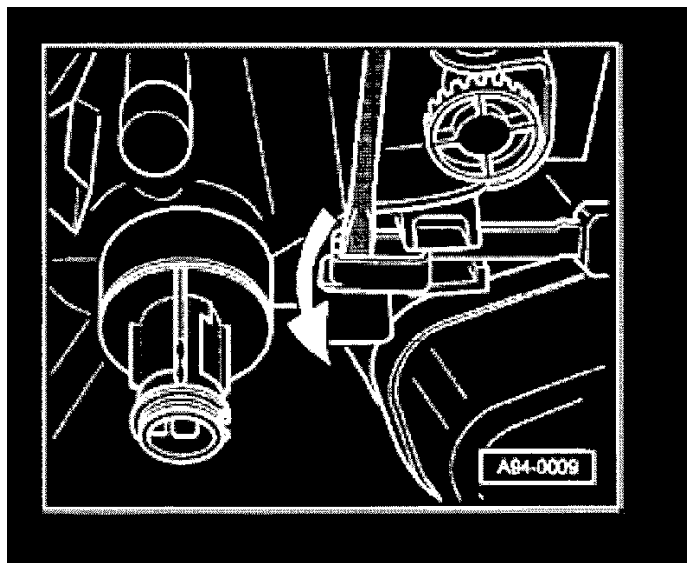

- Carefully press out release lever toward rear using screwdriver.  
The position of the release lever depends on the headlight version:
  - Standard headlights: release lever is attached to headlight housing
  - Three-way headlights: release lever is attached to turn signal

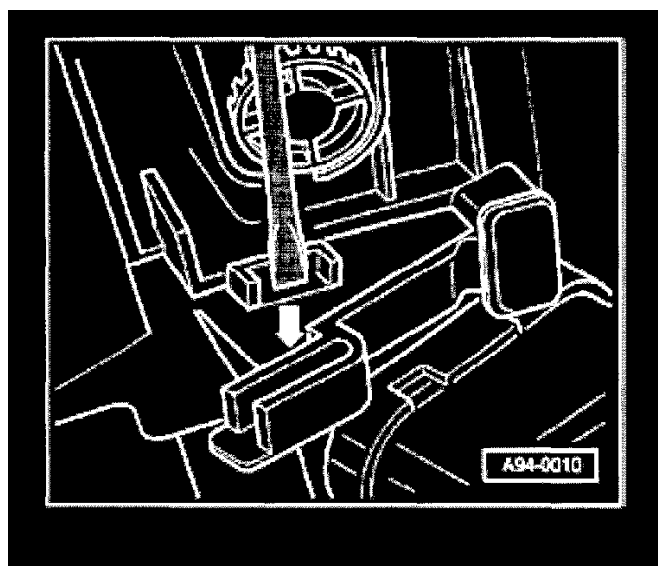

- Press catch (lever) slightly down (arrow) and push turn signal lens out toward front.
- Disconnect harness connector and rotate and remove bulb assembly.