


Combination Switch: Service and Repair

Flasher/Headlamp/Trip Switch


Removal

1. Disconnect battery ground cable.
2. **NOTE:** Steering wheel must be in straight ahead position.


Remove steering wheel.

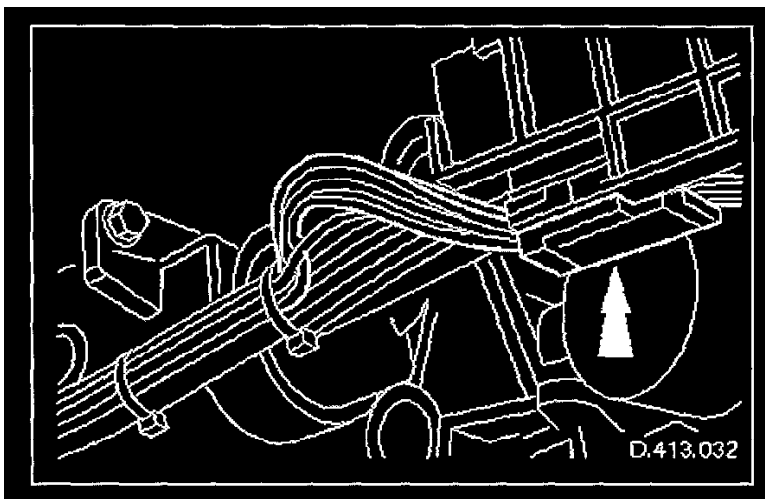

3. Displace cancellation module connector from mounting bracket and disconnect.

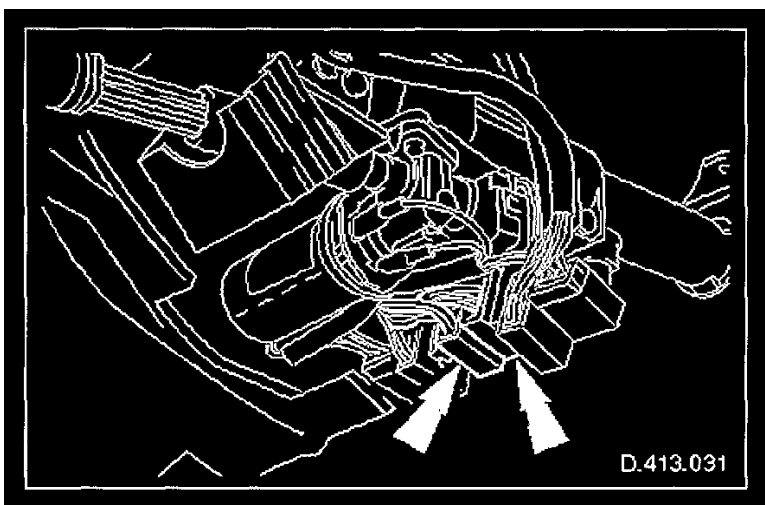

4. Displace flasher/headlamp/trip switch connectors from mounting bracket and disconnect.
 - Cut and remove appropriate harness securing ties.

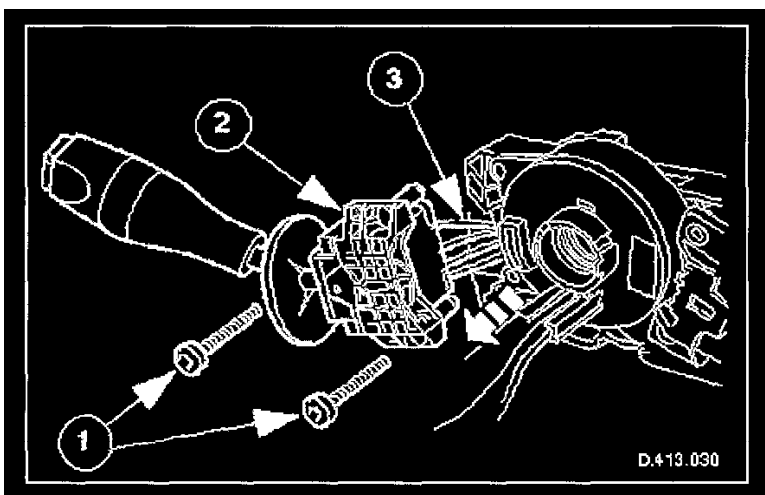

5. Remove switchgear.
 1. Remove two screws which secure switch assembly/cancellation module to mounting bracket.
 2. Displace switchgear from mounting bracket.
 3. Route switchgear harness through mounting bracket and remove switchgear.

Installation

1. Installation is reverse of removal.