


# Ignition Control Module: Service and Repair


## IGNITION CONTROL MODULE REPLACEMENT

### REMOVAL PROCEDURE

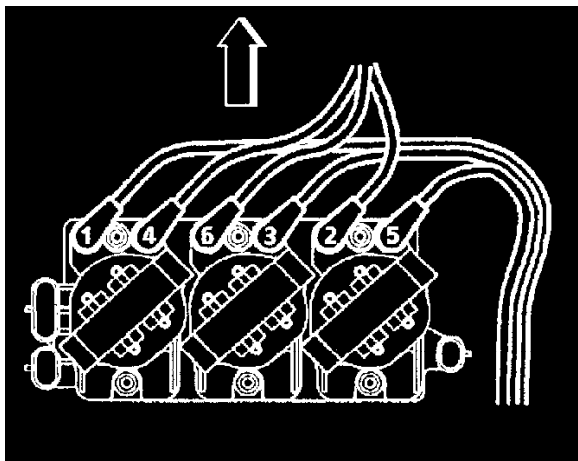

1. Disconnect all the electrical connectors at the ignition control module.
2. Note position of spark plug wires for installation and disconnect the spark plug wires from ignition coils.
3. Remove the screws securing coil assemblies to ignition control module.
4. Disconnect the coils from ignition control module.
5. Remove the ignition control module from the bracket.

### INSTALLATION PROCEDURE

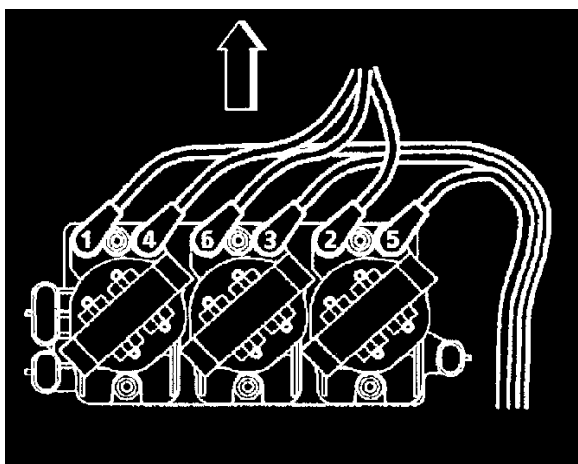

1. Install the ignition control module on the bracket.
2. Install the coils to ignition control module.

**NOTE:** Refer to Fastener Notice in Service Precautions.

3. Reinstall the screws.

#### **Tighten**

Tighten the screws to **4.5 N.m (40 lb in)**.

4. Connect the spark plug wires as noted during removal.
5. Connect the electrical connectors to the ignition control module.