


## Coolant Reservoir: Service and Repair

### Coolant Expansion Tank Removal

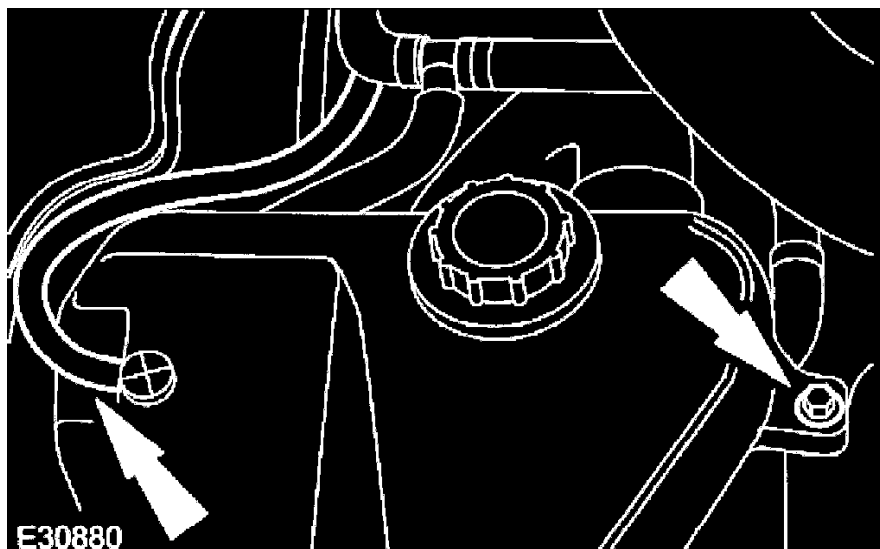


#### Vehicles without supercharger

1. **NOTE:** Cap the vent hose to minimize coolant loss.

Detach the coolant expansion tank.

^ Detach the vent hose.

^ Remove the coolant expansion tank retaining bolt.

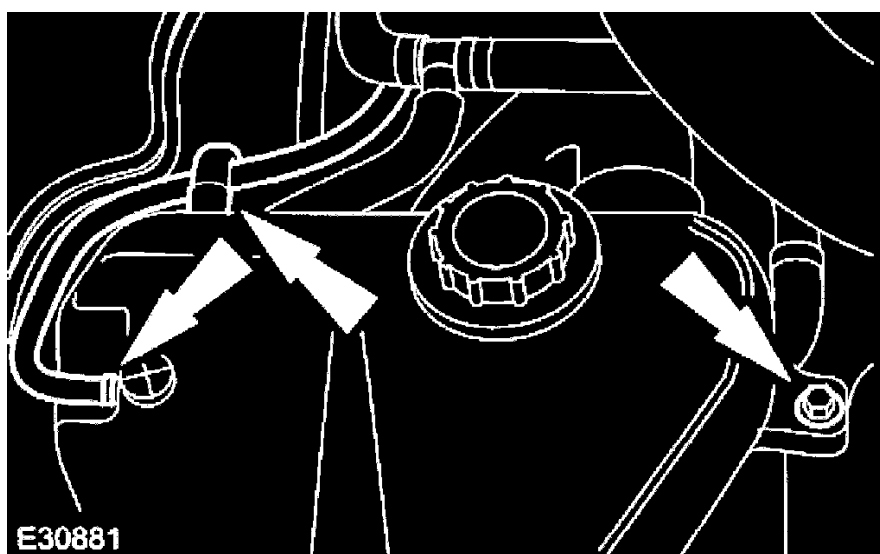


#### Vehicles with supercharger

2. **NOTE:** Cap the vent hoses to minimize coolant loss.


Detach the coolant expansion tank.

^ Detach the vent hoses.


^ Remove the coolant expansion tank retaining bolt.

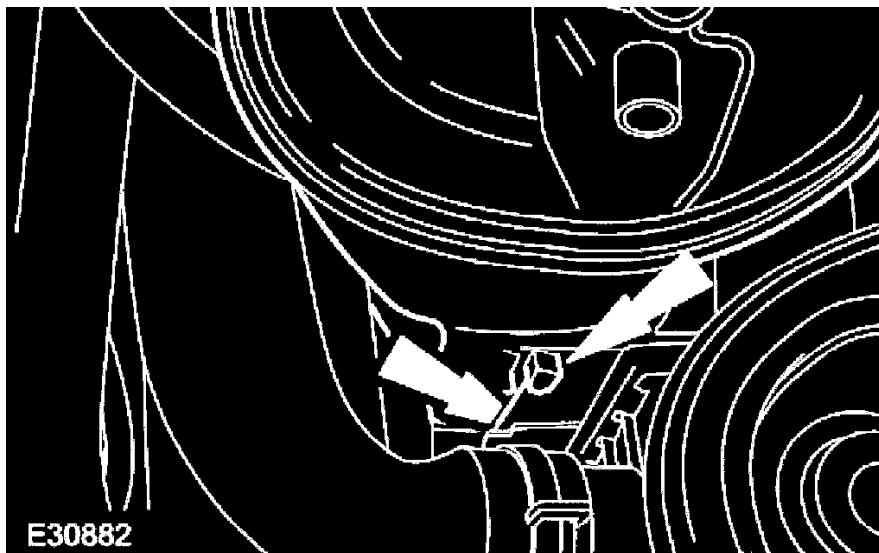**All vehicles**

3. Detach the coolant expansion tank.

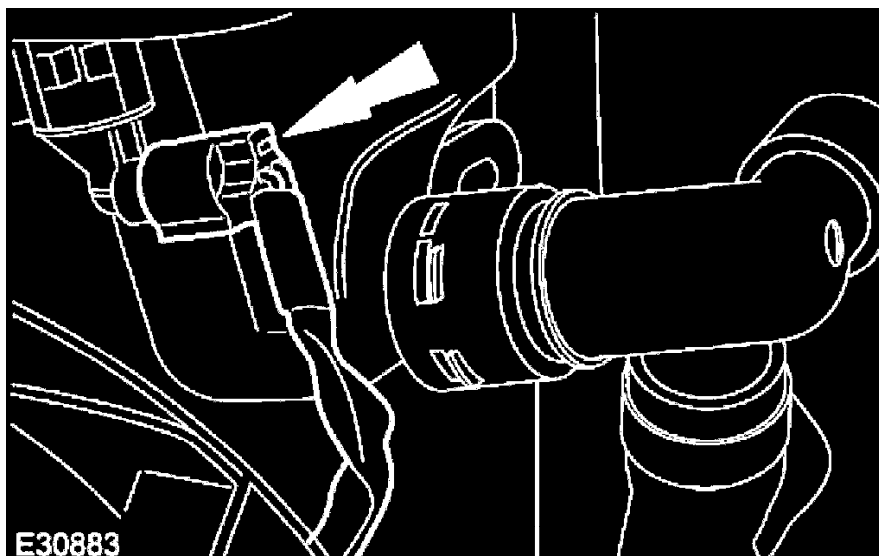

4. Disconnect the coolant expansion tank low level sensor.

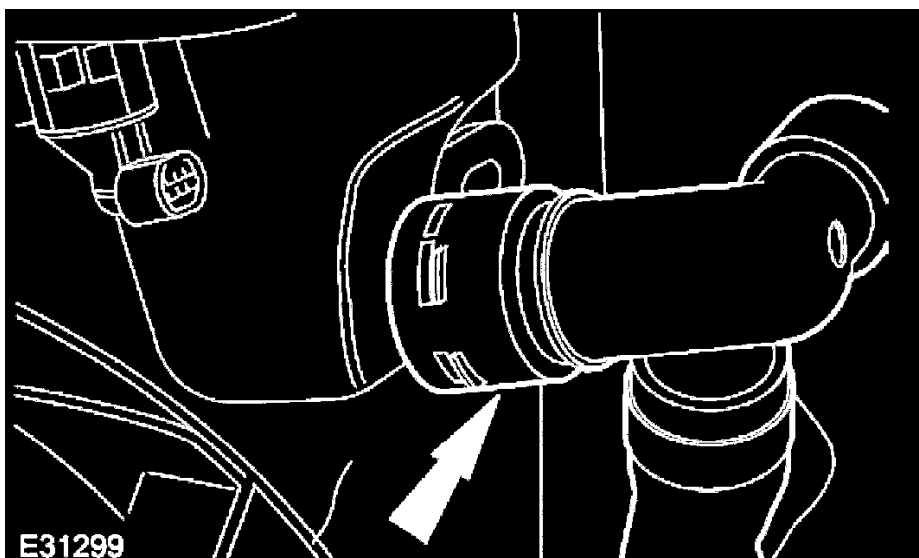


5. **NOTE:** Make sure the retaining clip is not removed.

**NOTE:** Cap the coolant expansion tank lower hose to minimize coolant loss.

Detach the coolant expansion tank lower hose.

^ Remove the coolant expansion tank.

## Installation

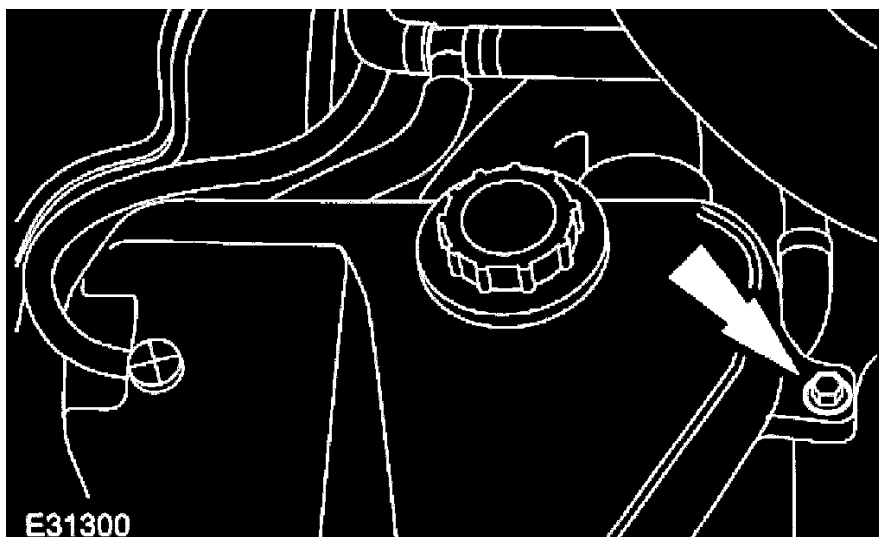

1. To install, reverse the removal procedure.  
^ Tighten to **3 Nm**.
2. Check and top up the cooling system as required.