


# Power Steering Pump: Service and Repair

## Power Steering Pump


### REMOVAL

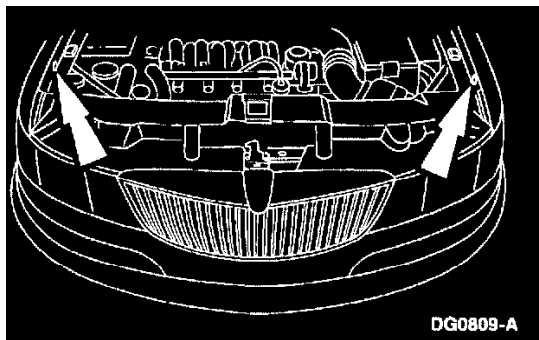


1. Remove the radiator upper sight shield.




2. Disconnect the power steering reservoir pump hose.
3. Raise the vehicle.
4. Remove the air conditioning compressor.

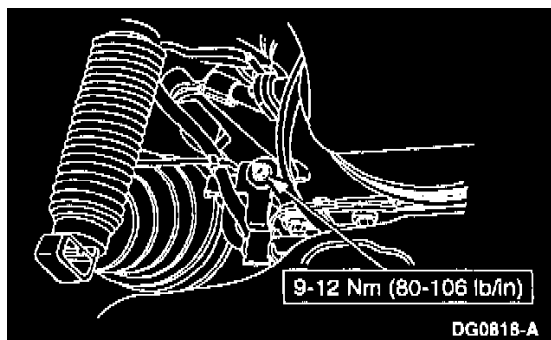

5. Remove the nut and the routing bracket.

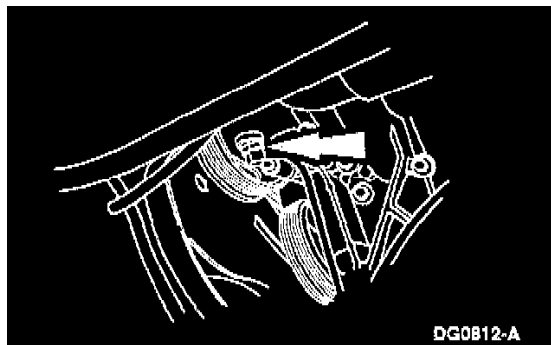




6. Disconnect the power steering pressure hose.

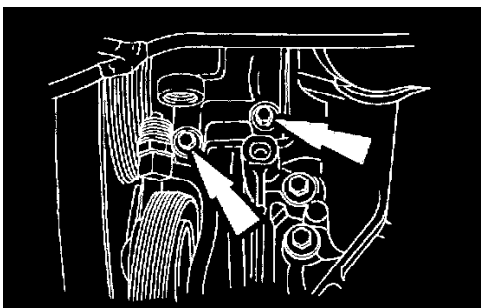

7. Remove the four bolts and the power steering pump.

#### INSTALLATION

1. Follow the removal procedure in reverse order.
2. Install anew seal on the high pressure line fitting.

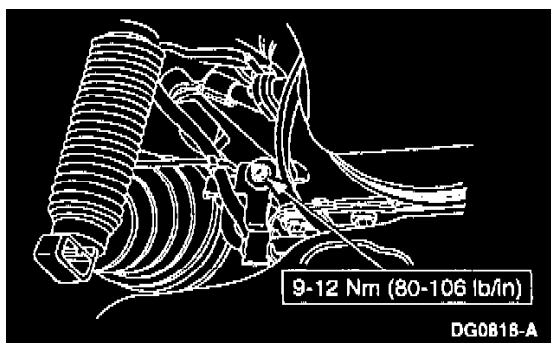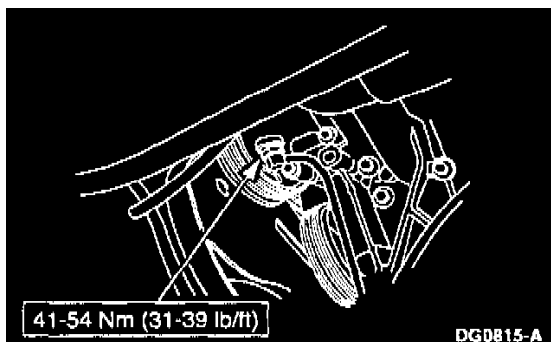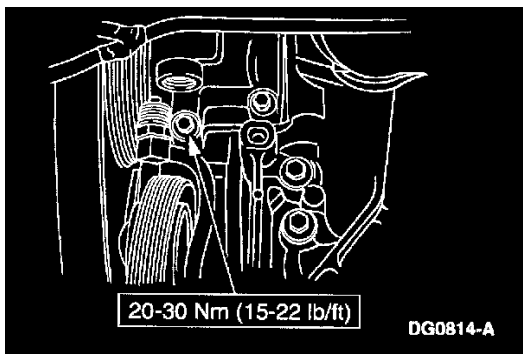

3. Fill and leak check the system.