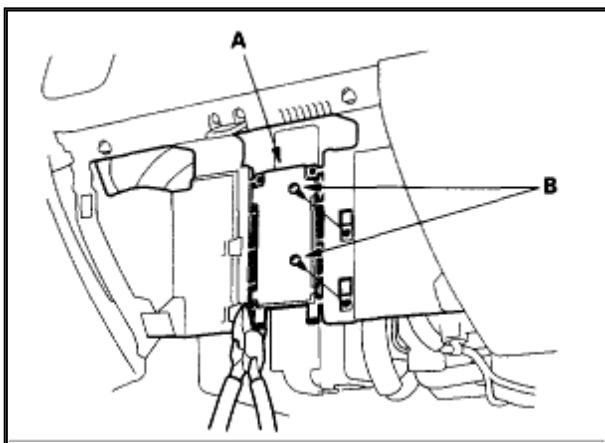



Dust and Pollen Filter Replacement

The dust and pollen filter should be replaced every **30,000 miles (48,000 km)** or **24 months**, whichever comes first. Replace the [filters](#) more often if the air flow is less than usual.

1. Remove the glove box.


[Zoom](#)[Sized for Print](#)

2. Cut the plastic cross brace (A) in the glove box opening with diagonal cutters in the area shown. Remove the cross brace and the two mounting screws (B) from the glove box opening. Retain these parts to be reinstalled later.

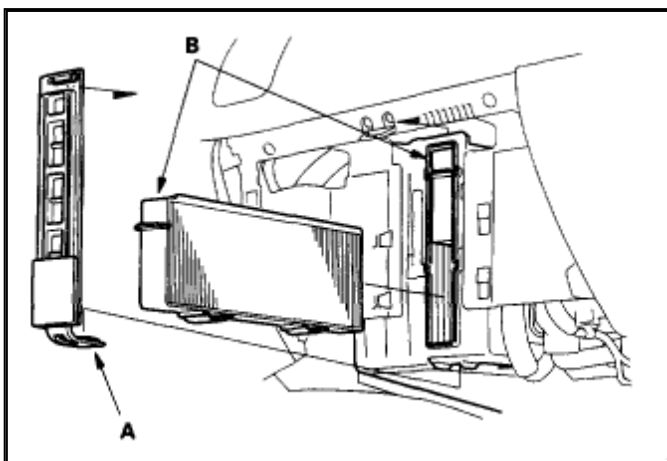
[Zoom](#)[Sized for Print](#)

3. Remove the filter lid (A) from the evaporator, then pull out the upper and lower dust and pollen filters (B).

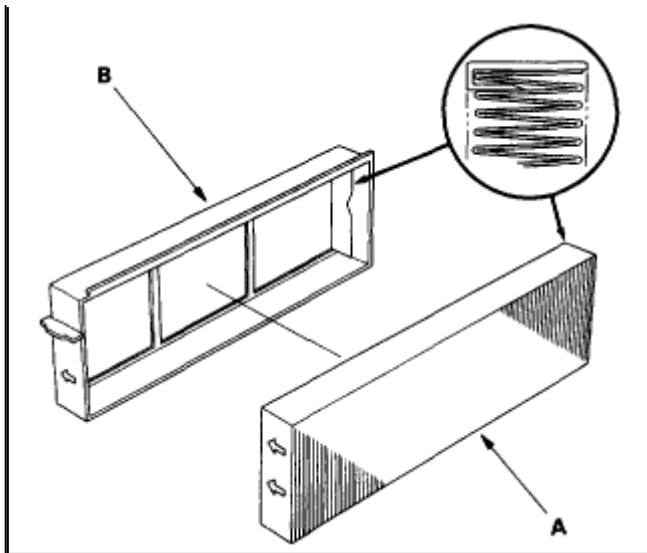


[Zoom](#)
[Sized for Print](#)

4. Remove and replace the filter (A) from the housing (B).
5. Install the [filters](#) in the reverse order of removal. Make sure that there is no air leaking out of the evaporator.

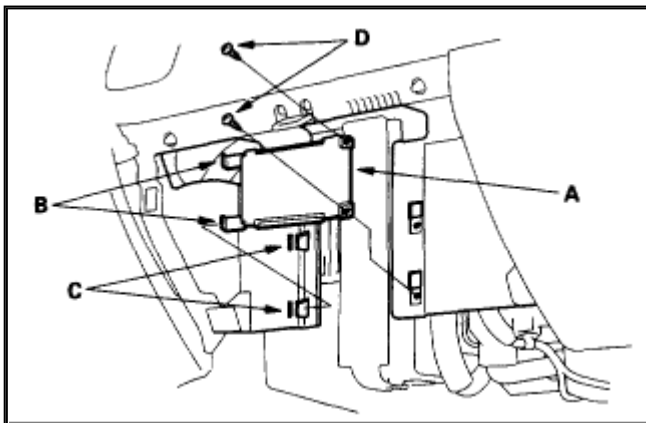
[Zoom](#)
[Sized for Print](#)

6. Install the cross brace (A) into the glove box opening by aligning the tabs (B) with the slots (C).
7. Secure the cross brace with the two mounting screws (D) removed in step 2.
8. Reinstall the glove box.