

34 21 200 Removing and installing or replacing brake linings on both rear disk brakes

Special tools required:

- 34 1 050
- 34 1 080

Necessary preliminary tasks:

- Remove wheels.


Observe safety instruction on raising the vehicle.

If necessary, when replacing linings, reset CBS display in accordance with factory specification.

Note: After completing work:

- Fully depress brake pedal several times so that brake linings contact brake disks.
- When installing new brake linings at front and rear axles, [brake fluid](#) level must be brought up to "MAX" marking.
- Hold ignition key for at least 30 seconds in position "1" without starting engine. This clears a fault entry in the RAM

This prevents the brake wear indicator lamp from lighting up again.

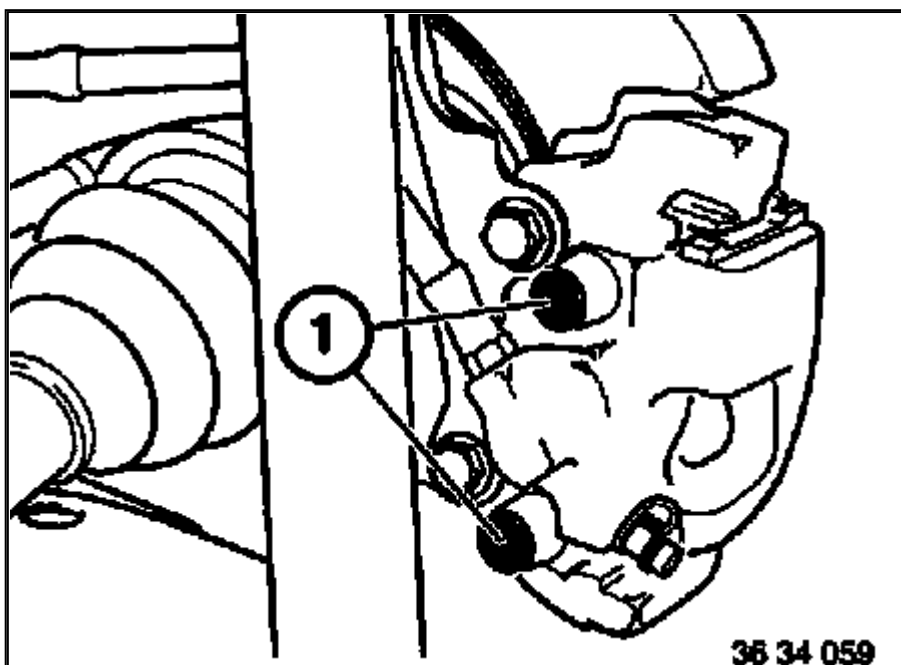

Zoom


Sized for Print

Remove plastic plugs (1).

Right side:

Disconnect plug connection for brake lining wear sensor.

If necessary, replace brake lining wear sensor.

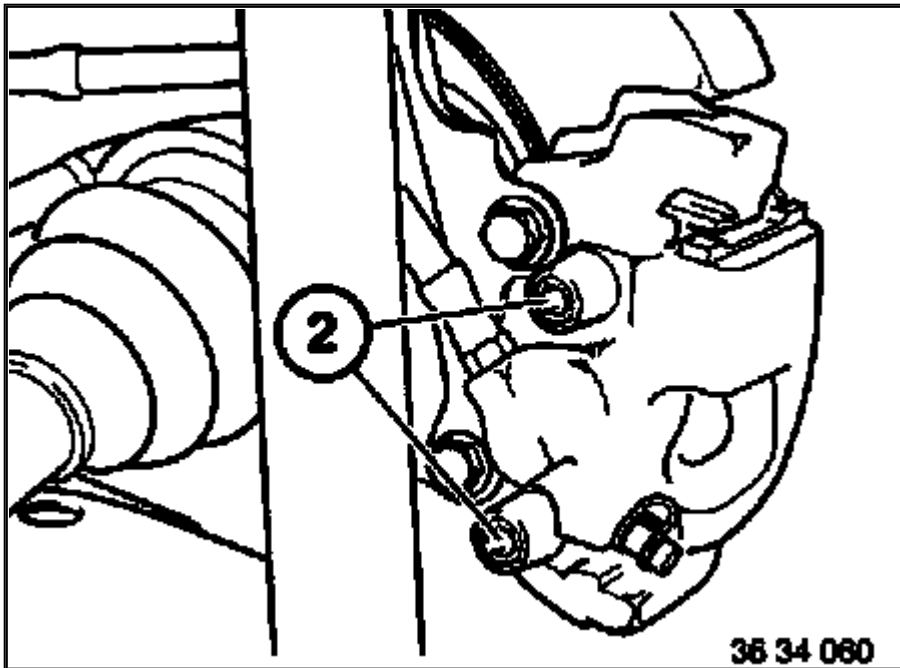

Zoom

Sized for Print

Release guide screws (2) with special tool 34 1 080.

Installation:

Only clean guide screws, do not grease.

Check threads.

Replace all guide screws which are not in perfect condition.

Tightening torque

35 Nm.