


GENERATOR

REMOVAL


1. Disconnect the [battery](#).
2. Remove the radiator shroud and cooling fan.
3. Relieve the accessory drive belt tension and remove the belt from the generator pulley.

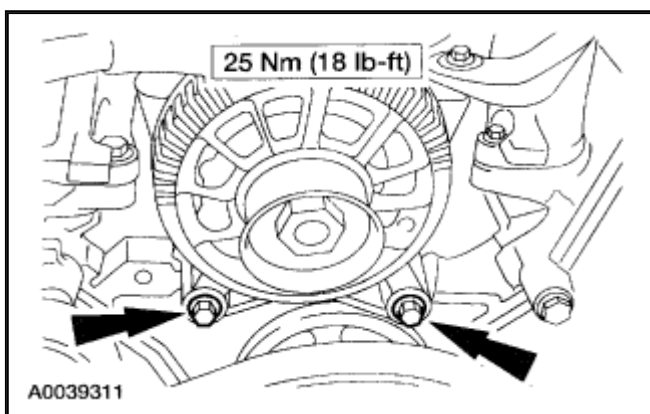

Zoom

Sized for Print

4. Loosen the lower generator bolts.
5. Disconnect the harness pin-type retainer from the water-neck housing.

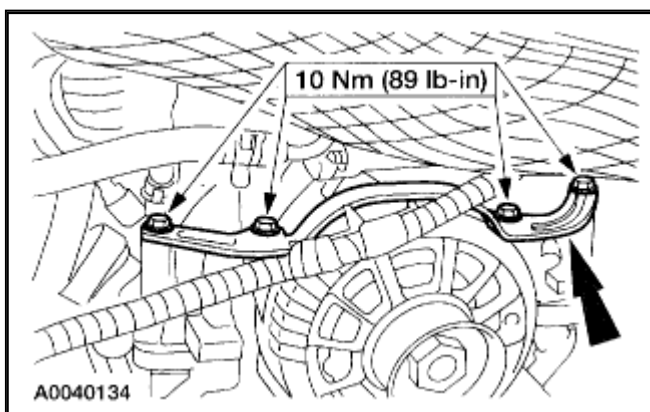


Zoom

Sized for Print

6. Remove the bolts and the generator bracket.
7. Position the generator aside.



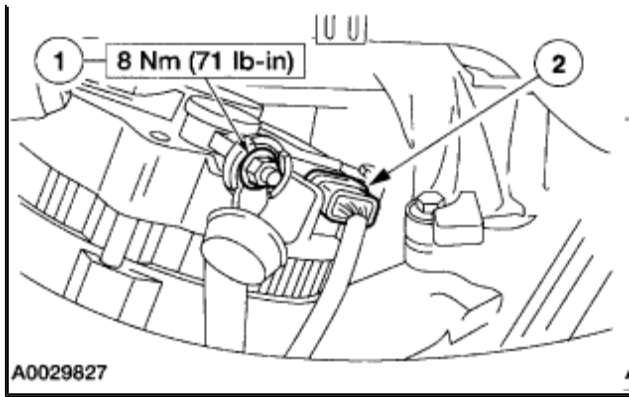

Zoom

Sized for Print

8. **CAUTION: This is a new style connector that has a press-to-release tab. Pulling on the tab could result in damage to the connector or harness.** Disconnect the electrical connections and remove the generator.

- 1 Remove the B+ cable nut and cable.
- 2 Disconnect the electrical connector.

INSTALLATION

1. To install, reverse the removal procedure.