

1983 Mazda 626

2.0L 4-CYL 1983 MAZDA ENGINES 2.0L 4-Cylinder

WATER PUMP

Removal

Turn crankshaft to No. 1 TDC. Drain coolant. Remove fan belt and timing belt upper cover. Remove wheel well splash shield, crankshaft pulley and timing belt lower cover. Remove tensioner and timing belt. Remove water pump inlet pipe. Remove water pump and gasket.

Installation

To install, reverse removal procedure. During assembly, apply a coating of vegetable oil to "O" ring. See TIMING BELT R & I for alignment and adjustment procedures. Fill cooling system.