


2002 Toyota Sequoia Limited

2002 ACCESSORIES & EQUIPMENT Exterior/Interior Trim - Sequoia

COMPONENTS

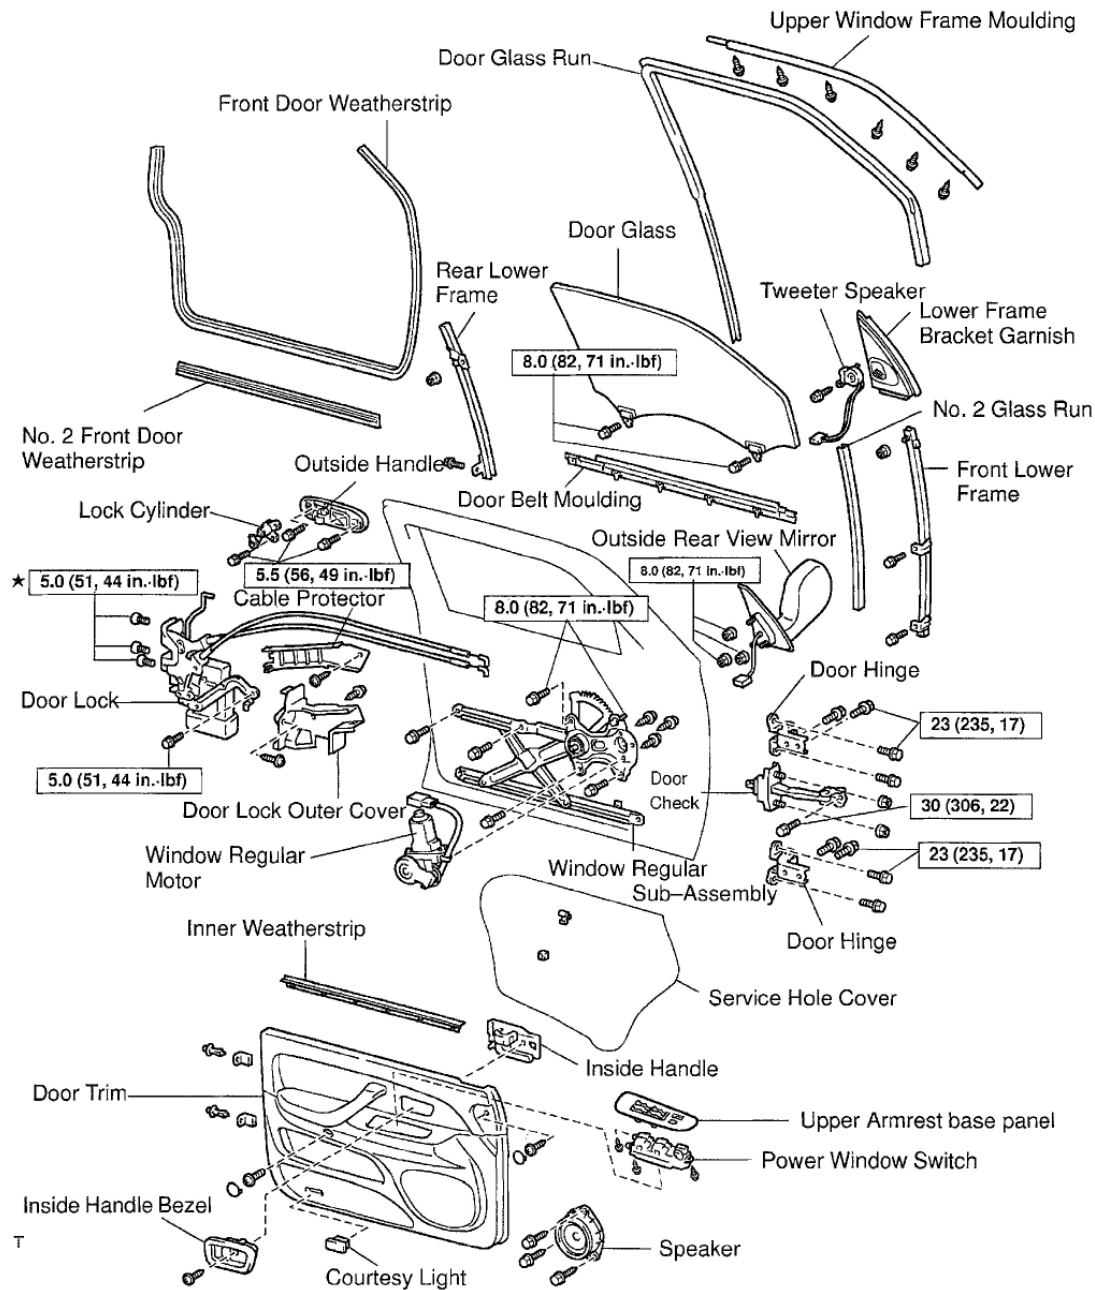

N·m (kgf·cm, ft·lbf) : Specified torque
 ★ Precoated part

G02146497

Fig. 10: Locating Front Door Components
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


DISASSEMBLY

1. **Remove inside handle bezel :**

- a. Using a screwdriver, open the cover.

NOTE: **Tape the screwdriver tip before use.**

- b. Remove the screw.

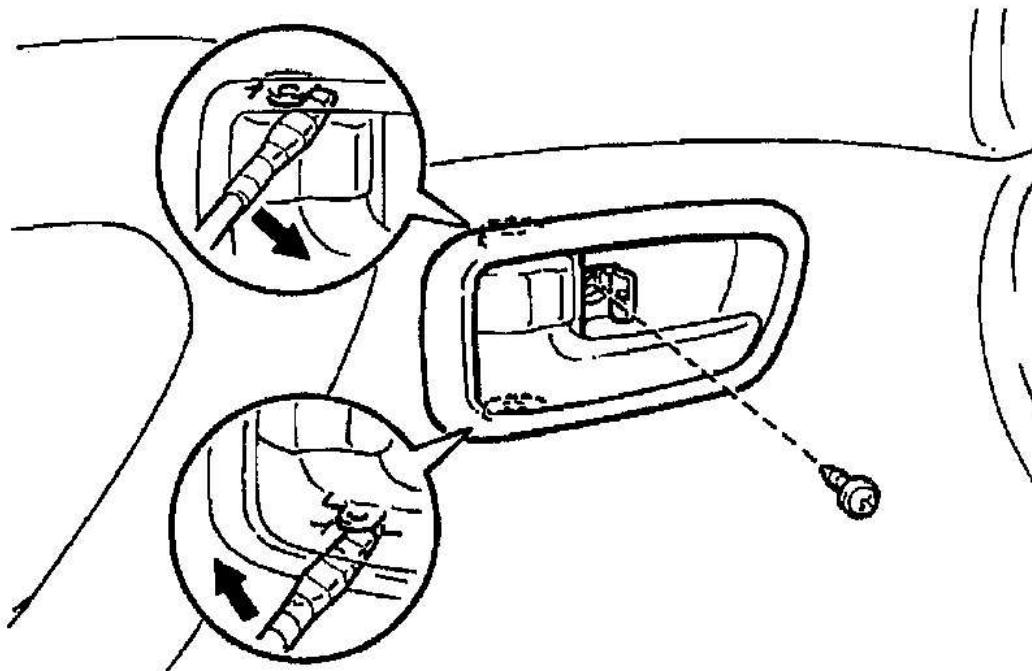

G02146498

Fig. 11: Locating Inside Handle Bezel Mounting Clips & Screw (Front Door)

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


NOTE: **Tape the screwdriver tip before use.**

- c. Using a screwdriver, remove the inside handle bezel.

2. **Remove courtesy light :**

3. **Remove upper armrest base panel with power window switch :**

NOTE: **Tape the screwdriver tip before use.**

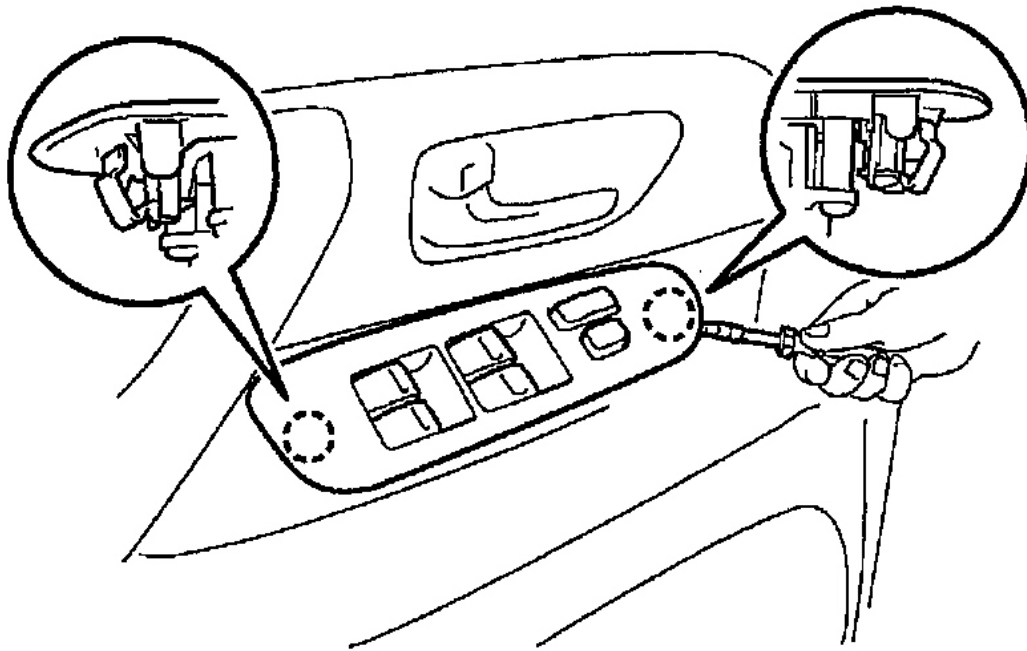

T
G02146499

Fig. 12: Locating Upper Armrest Base Panel W/Power Window Switch (Front Door)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- a. Using a screwdriver, remove the upper armrest base panel with power window switch.
- b. Disconnect the connector.
- c. Remove the 3 screws and power window switch from the upper armrest base panel.

NOTE: **Tape the screwdriver tip before use.**

4. Remove lower frame bracket garnish :

Using a screwdriver, remove the lower frame bracket garnish.

5. Remove door trim :

NOTE: **Tape the screwdriver tip before use.**

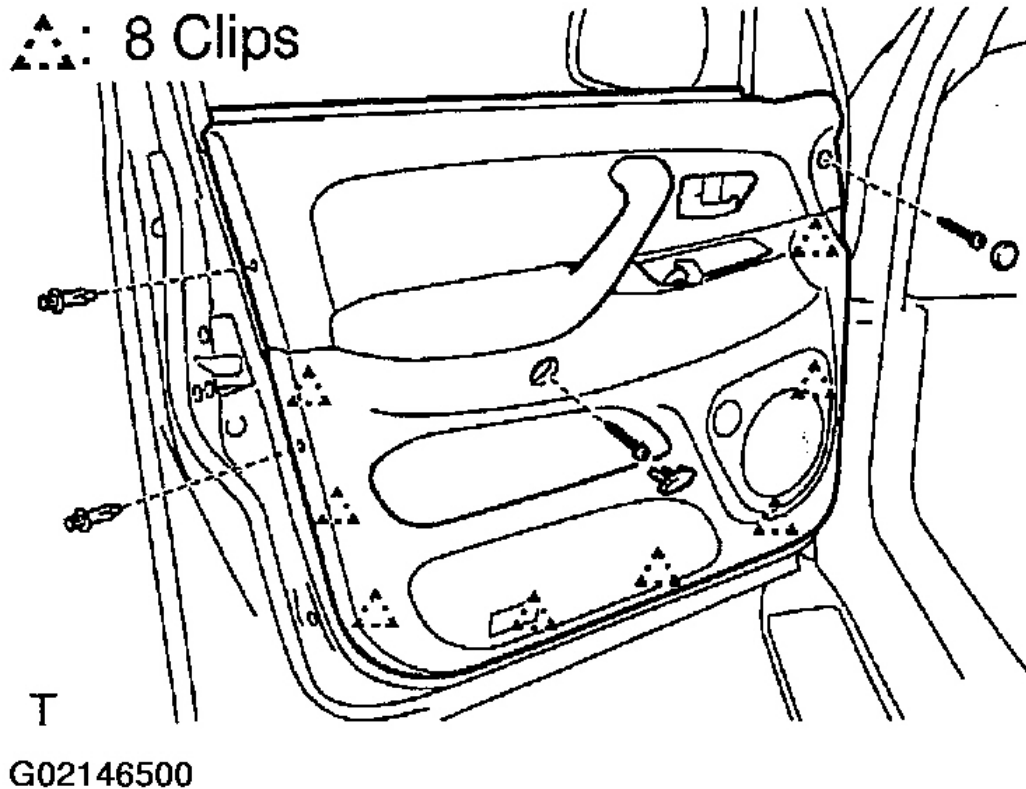


Fig. 13: Locating Front Door Trim Caps, Clips & Mounting Screws (Front Door)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- a. Using a screwdriver, remove the 2 caps.
- b. Remove the 2 screws and 2 clips.

NOTE: **Tape the screwdriver tip before use.**

- c. Insert a screwdriver between the door trim and door panel to pry the door trim.
- d. Pull the door trim upward to remove the door trim.
- e. Remove the inner weatherstrip from the door trim.

6. **Remove tweeter speaker .**
7. **Remove outside rear view mirror .**

Torque: 8.0 N.m (82 kgf.cm, 71 in..lbf) .

8. **Remove speaker .**

9. Remove inside handle :

- a. Slide the inside handle backward to remove it.


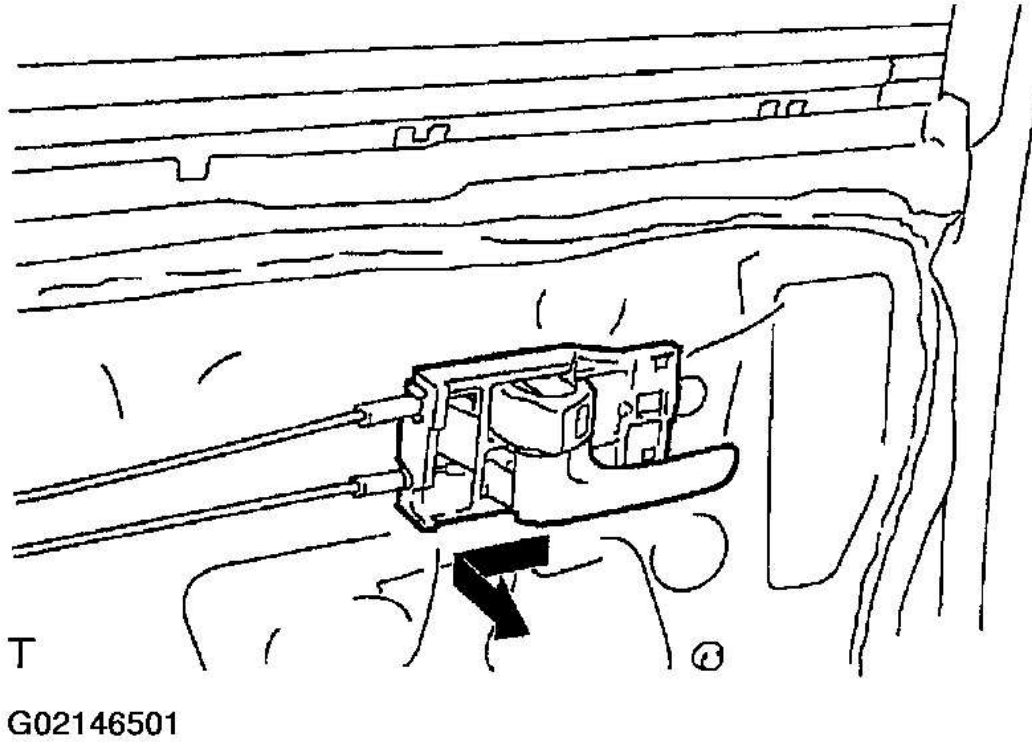


Fig. 14: Removing Inside Handle

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the 2 cables from inside handle.

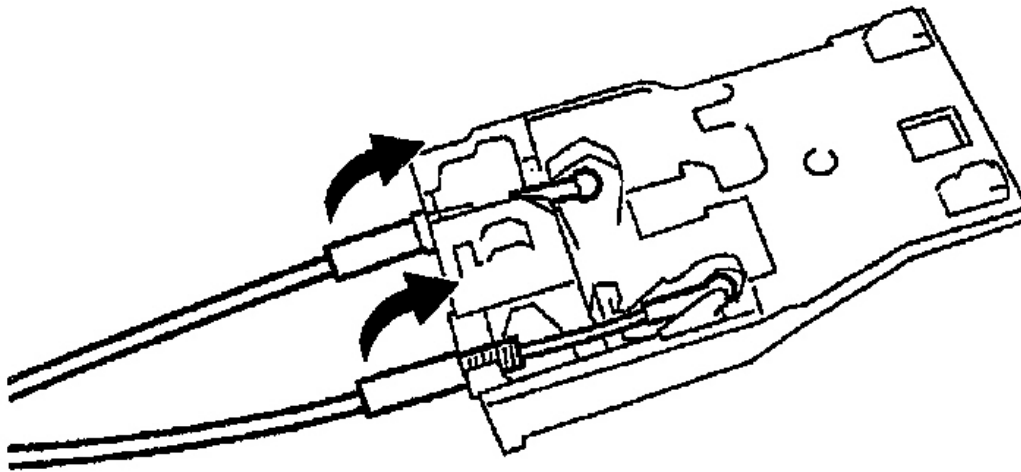

T

G02146502

Fig. 15: Locating Door Lock Control Cables

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE: At the time of reassembly, please refer to the following item. Bring out the 2 control cables and wire harness through the service hole cover.

10. **Remove service hole cover :**

- a. Using a clip remover, remove the clamp and grommets.

NOTE: Do not tear the cover.

- b. Remove the service hole cover.