


Ignition Lock Cylinder - Removal and Replacement

[Notes](#)


IGNITION LOCK CYLINDER

REMOVAL


1. Disconnect the battery ground cable.

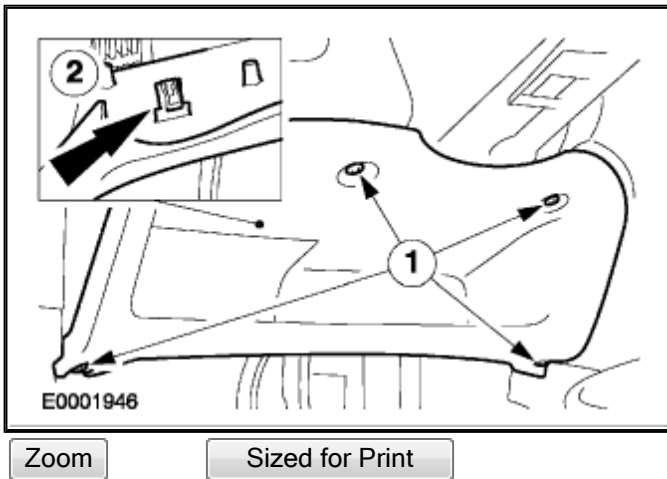

2. Remove the instrument panel lower panel.
 - 1 Remove the screws.
 - 2 Release the fastener.

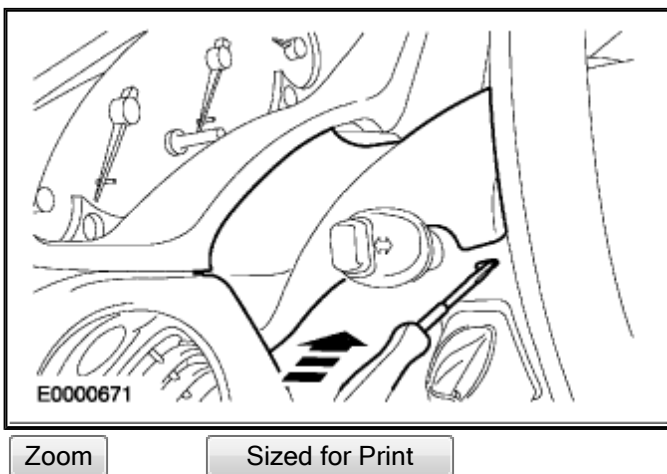

3. Detach the steering column upper shroud.
 - Using a thin bladed screwdriver, release the two clips (one each side).

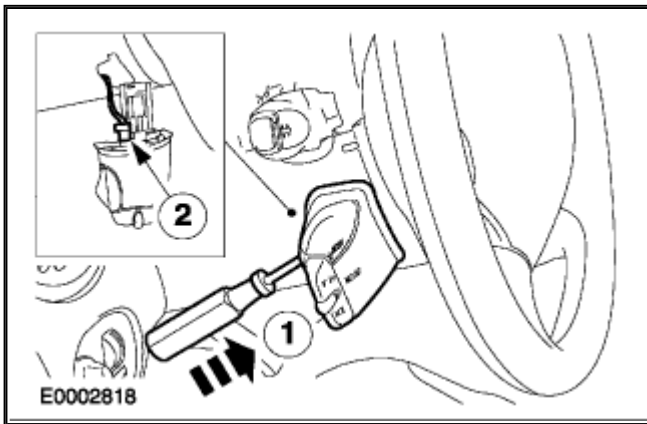


Zoom

Sized for Print

4. Remove the audio control switch (if equipped).

- 1 Using a thin bladed screwdriver, release the locking tang.
- 2 Disconnect the electrical connector.

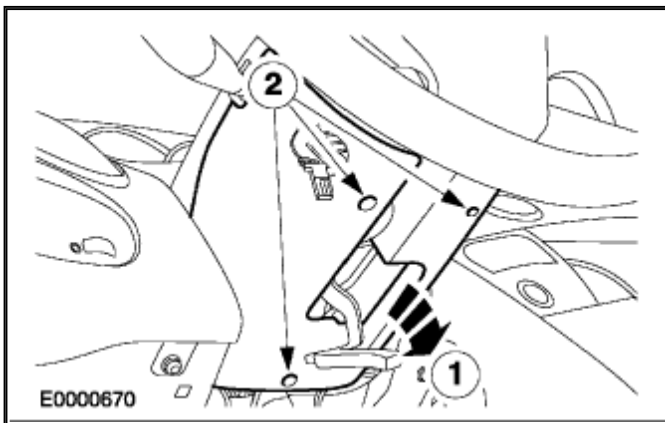


Zoom

Sized for Print

5. Remove the steering column lower shroud.

- 1 Release the steering column locking lever.
 - 2 Remove the screws.
- Remove the ignition key.



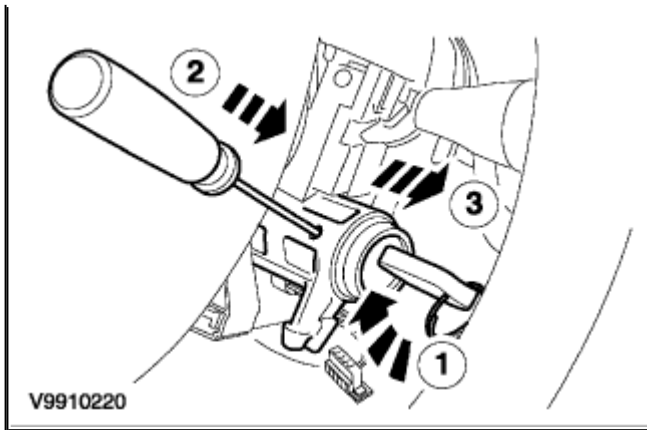

Zoom

Sized for Print

6. Remove the ignition lock cylinder.

1 Insert and turn the ignition key to position I (Accessory).

2 Using a thin bladed screwdriver, depress the detent.

3 Remove the lock cylinder.

INSTALLATION

1. To install, reverse the removal procedure.