


Cooling Fan

[Notes](#)

Cooling Fan - 6.0I- Diesel

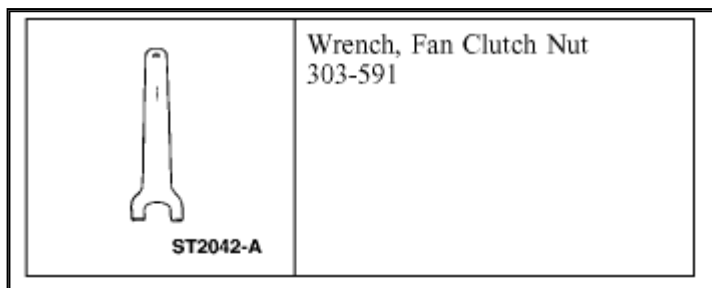


Zoom

Sized for Print

Special Tool(s)

Removal and Installation

1. Remove the [radiator](#).

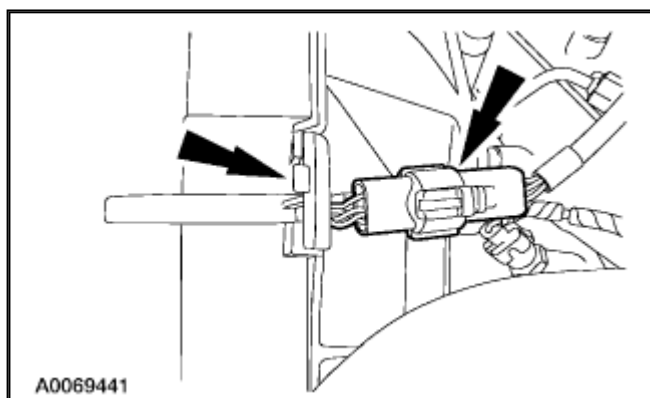


Zoom

Sized for Print

2. Disconnect the cooling fan clutch electrical connector. Unclip and position the fan wiring aside.



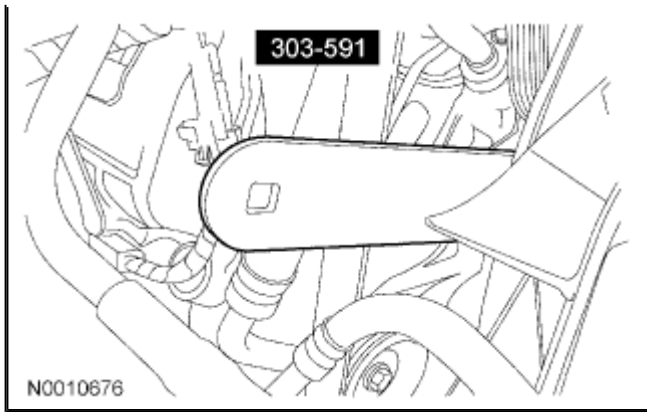


Zoom

Sized for Print

3. **NOTE:** Use a hole in the fan hub to prevent the fan from turning. Using the special tool, remove the cooling fan and clutch.

- To install, tighten to **133 Nm (98 ft. lbs.)** .

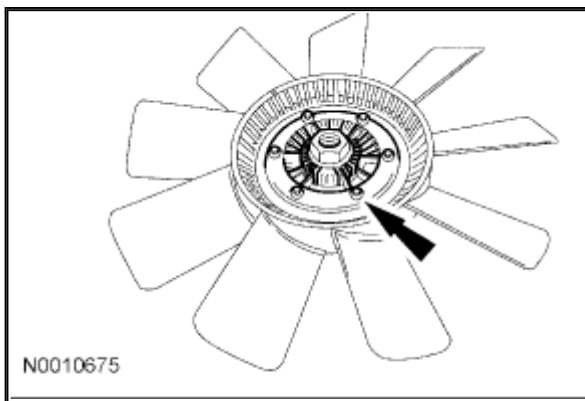

Zoom

Sized for Print

4. If necessary, remove the bolts and separate the cooling fan and the clutch.
To install, tighten to **17 Nm (13 ft. lbs.)** .
5. To install, reverse the removal procedure.