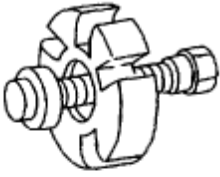

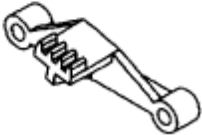


## Service and Repair

[Notes](#)

### Crankshaft Pulley - Supercharged Engines

 <p>ST1286-A</p>	<p><b>Remover, Crankshaft Vibration Damper</b> 303-009 (T58P-6316-D)</p>
 <p>ST1287-A</p>	<p><b>Installer, Crankshaft Vibration Damper</b> 303-102 (T74P-6316-B)</p>
 <p>ST2422-A</p>	<p><b>Locking Tool, Flywheel</b> 303-673</p>


Zoom

Sized for Print

### Special Tool(s)

#### Removal


1. Remove the supercharger drive belt.
2. Remove the [fan blade](#), clutch and shroud.
3. Raise the vehicle on a hoist.

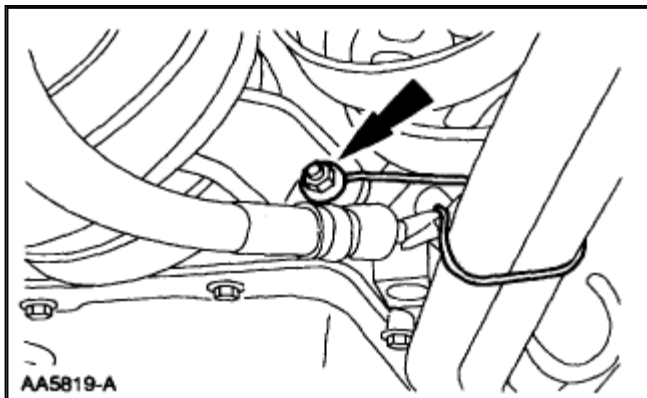

Zoom

Sized for Print


4. Remove the nut and position the shield aside.
5. Remove the transmission cooler line clip.

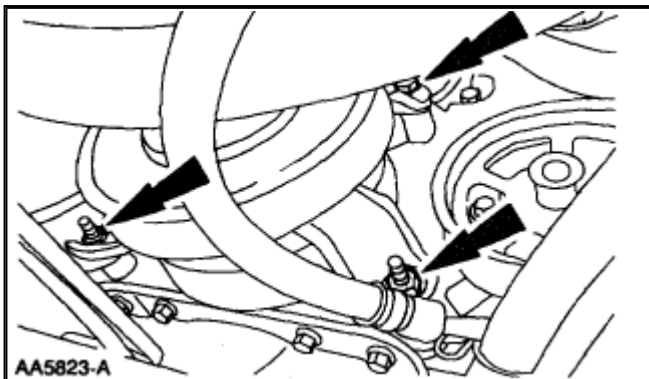

Zoom

Sized for Print

6. Remove the two nuts and one bolt.
7. Remove the starter motor.

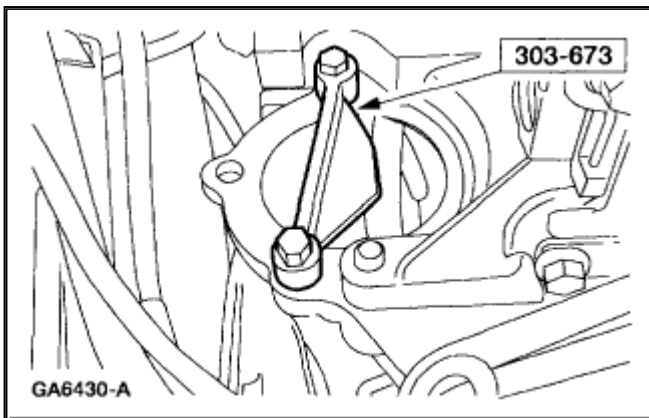


Zoom

Sized for Print

8. Install the special tool.
9. Remove the accessory drive belt.



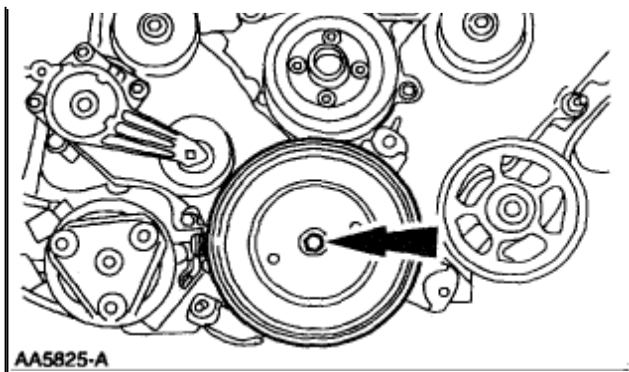


AA5825-A

Zoom

Sized for Print

- 10. **NOTE:** The auxiliary supercharger pulley has left-hand threads. Remove the pulley and brace assembly.

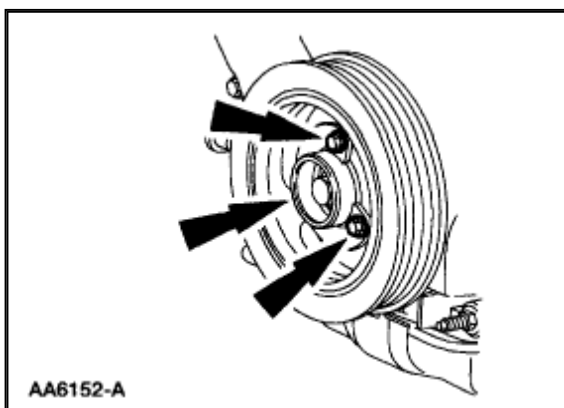


AA6152-A

Zoom

Sized for Print

- 11. Remove the supercharger pulley adapter.

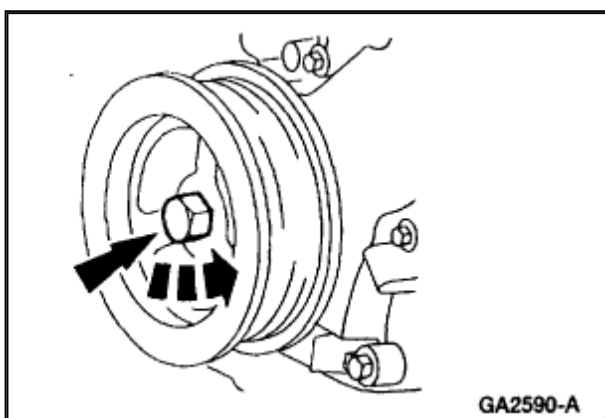


GA2590-A

Zoom

Sized for Print

12. Remove the bolt.

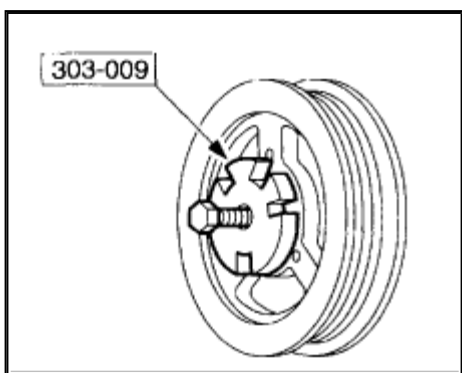


Zoom

Sized for Print

13. Using the special tool, remove the crankshaft pulley.

### Installation


1. **NOTE:** The crankshaft pulley must be installed within four minutes after applying the silicone.

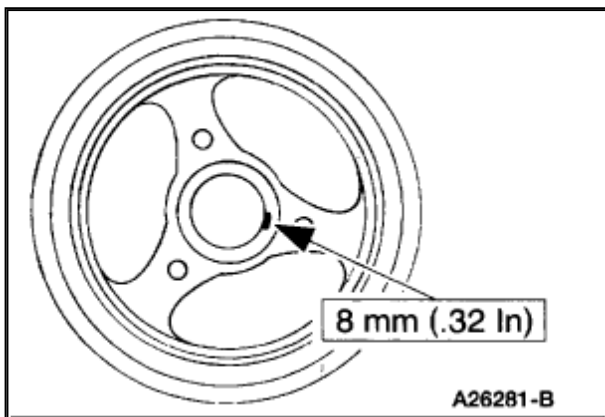


Zoom

Sized for Print

 Apply silicone gasket and sealant to the Woodruff key slot on the crankshaft pulley.




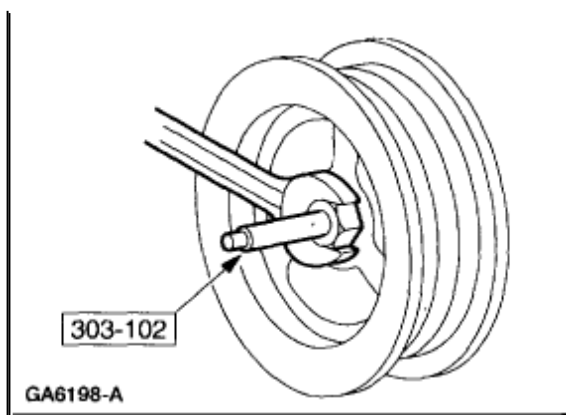

Zoom

Sized for Print

2. Using the special tool, install the crankshaft pulley.

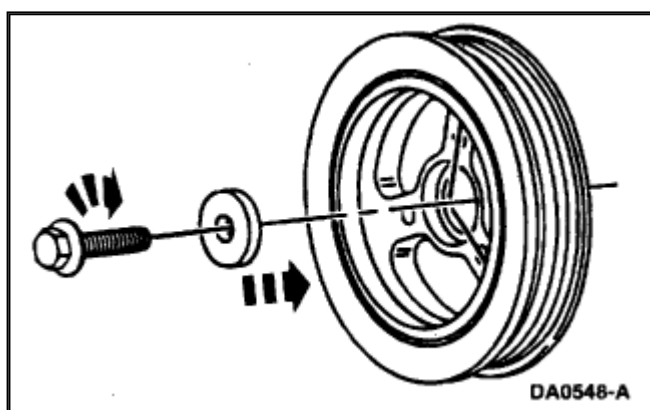


Zoom

Sized for Print

3. Install the bolt and washer. Tighten the bolt in four stages.

- Stage 1: Tighten to **90 Nm (66 ft. lbs.)** .
- Stage 2: Loosen the bolt.
- Stage 3: Tighten to **50 Nm (37 ft. lbs.)** .
- Stage 4: Tighten an additional **85 - 90°** .




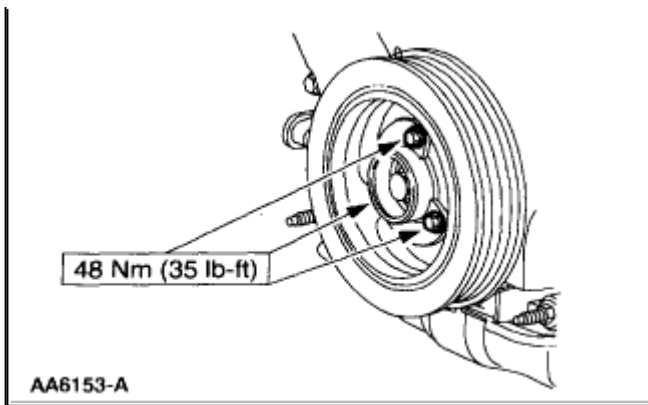

Zoom

Sized for Print


4. Install the supercharger pulley adapter.
5. Install the [drive belt](#).

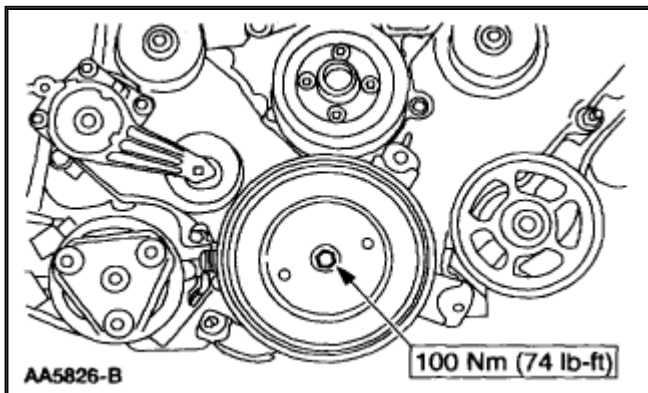

Zoom

Sized for Print


6. **NOTE:** Coat the threads of the supercharger pulley with anti-seize lubricant.  
**NOTE:** The auxiliary supercharger pulley has left-hand threads. Install the pulley and brace assembly.

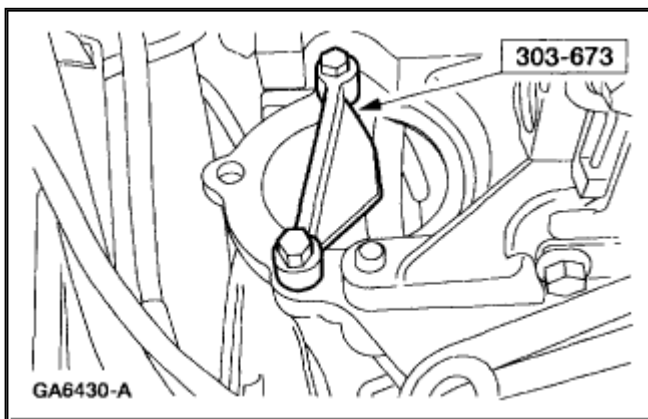

Zoom

Sized for Print


7. Remove the special tool.
8. Install the starter motor.

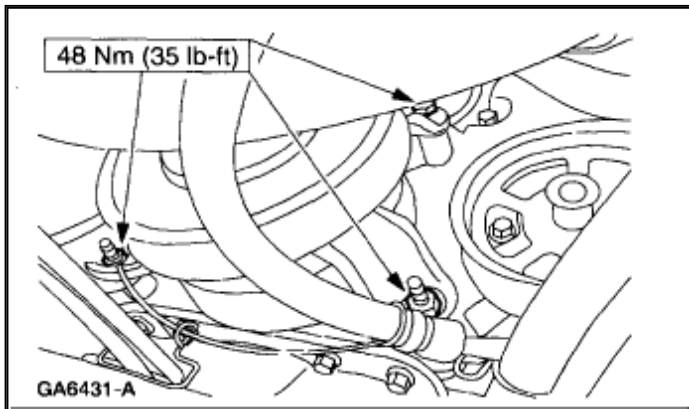

Zoom

Sized for Print

9. Position the transcooler line clip and install the two nuts and one bolt.

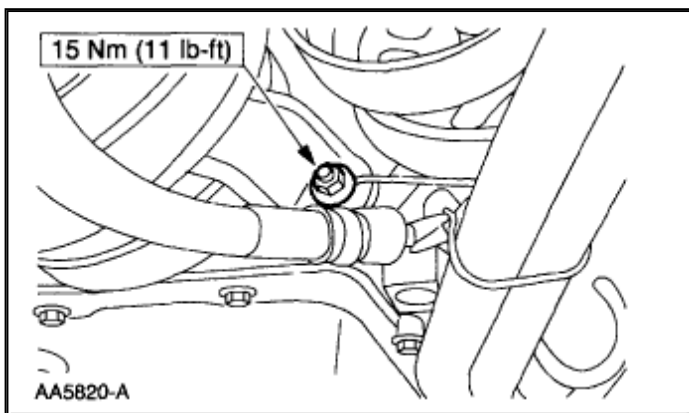

Zoom

Sized for Print

10. Position the shield and install the nut.
11. Lower the vehicle.
12. Install the [fan blade](#), clutch and shroud.
13. Install the [accessory drive belt](#) and the supercharger drive belt.