

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:

OK

 Conversion Calculator**2003 Subaru Outback F6-3.0L**[Vehicle Level](#) → [Engine, Cooling and Exhaust](#) → [Engine](#) → [Drive Belt](#) → [Service and Repair](#) ←


Service and Repair

[Notes](#)

V-belt

REMOVAL

1. Fit the tool to the belt tensioner mounting bolt.

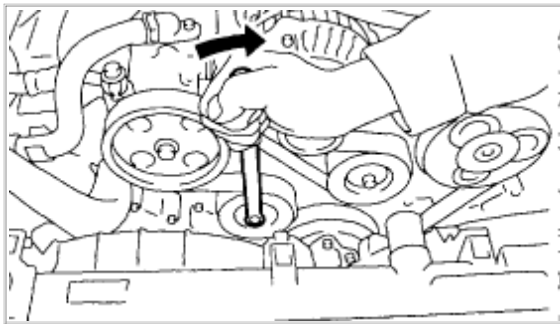


Zoom

Sized for Print


2. Turn the tool clockwise, and loosen the V-belt to remove.
3. Remove the V-belt cover.

INSTALLATION

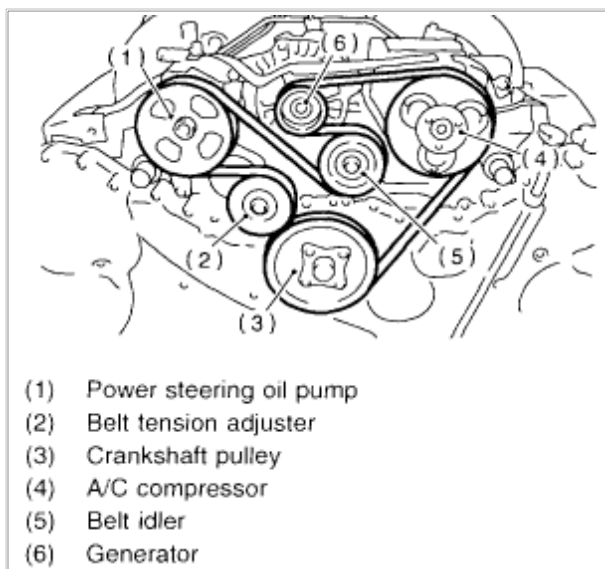[Zoom](#)[Sized for Print](#)

1. Install in the reverse order of removal.

INSPECTION

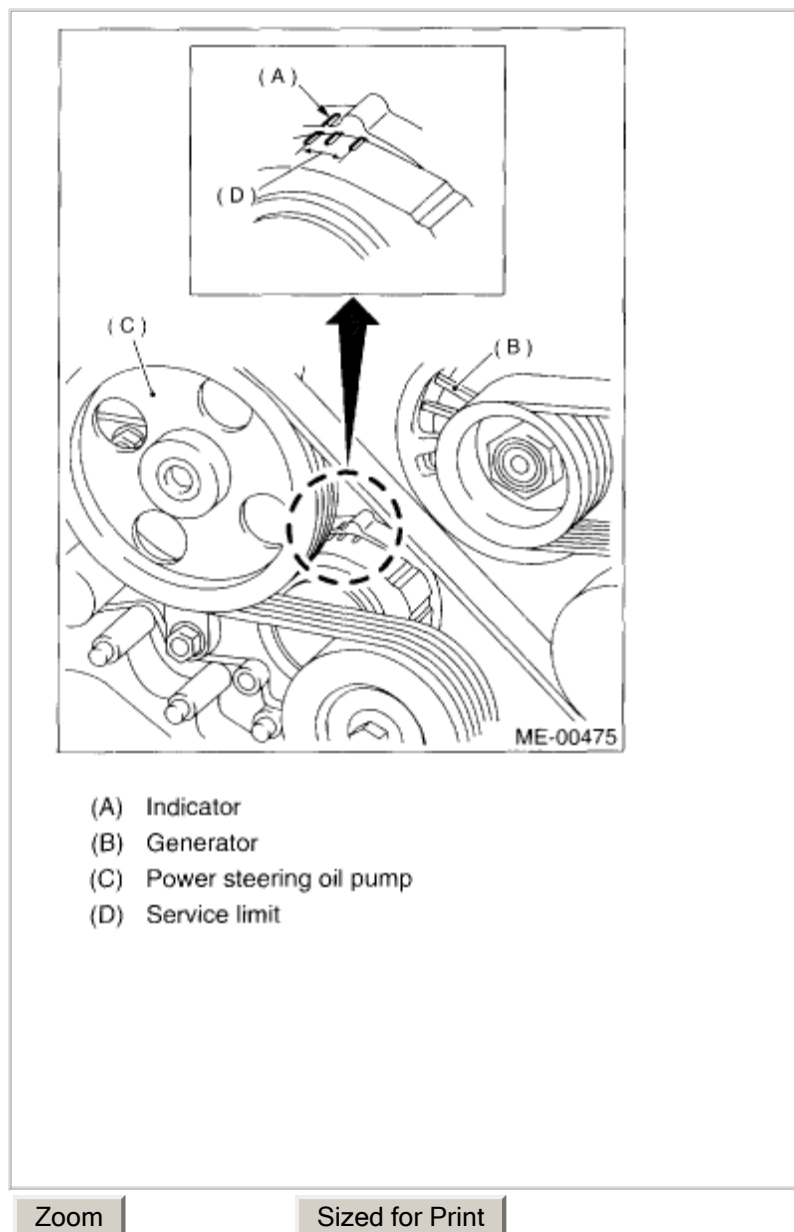

1. Replace belts, if cracks, fraying or wear is found.
2. Check that the V-belt automatic tensioner indicator (A) is within the range (D).