

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:


OK

 [Conversion Calculator](#)**1991 Mercedes Benz 300E (124 Chassis) L6-2960cc 3.0L SOHC (103)**[Vehicle Level](#) → [Body and Frame](#) → [Doors, Hood and Trunk](#) → [Front Door Panel](#) → [Service and Repair](#) ←

Service and Repair

[Notes](#)


Removal

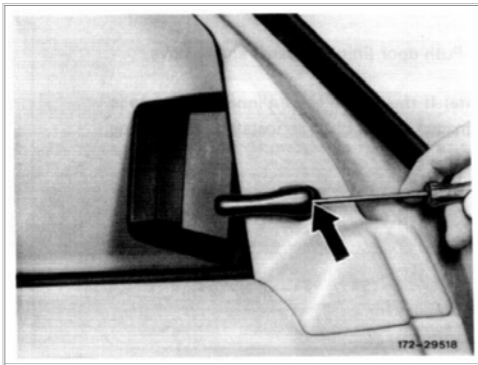

Zoom

Sized for Print


- 1 Push plastic lock with screwdriver out of handle and remove handle.

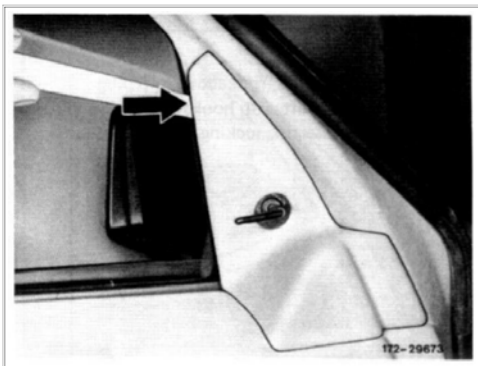


Zoom

Sized for Print


- 2 Unclip cover at top from door [frame](#) and pull out in upward direction.

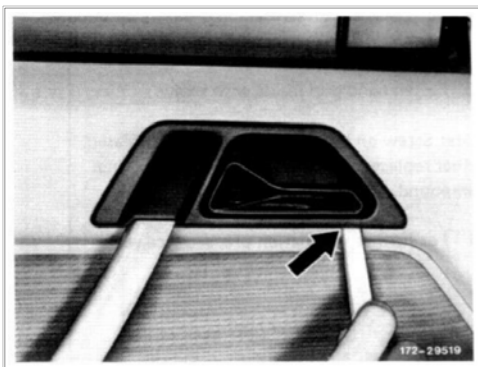[Zoom](#)[Sized for Print](#)

- 3 Force off molding on inside door actuation and turn out screw inside on handle.

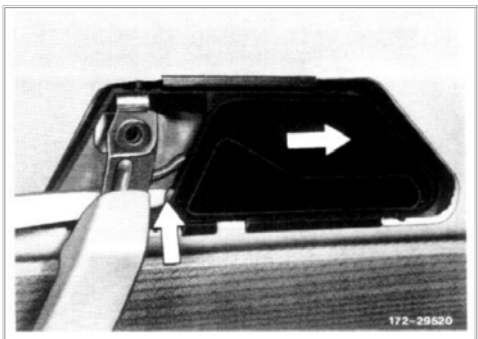[Zoom](#)[Sized for Print](#)


- 4 Disengage linkage of door handle, push door inside actuation forward and remove.
- 5 Move window downward and then remove window crank.

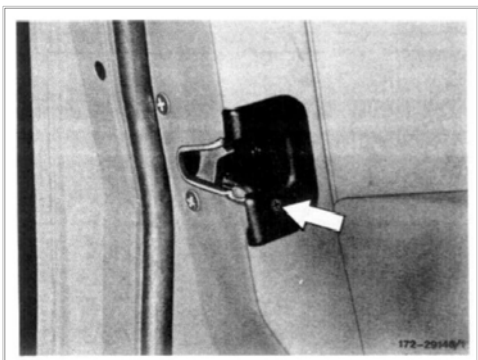[Zoom](#)[Sized for Print](#)

- 6 Remove bordering on door lock.
- 7 Push door lining upwards and remove.

Note: If the sealing foil on inner door plate is damaged, renew prior to installing door lining.


Installation

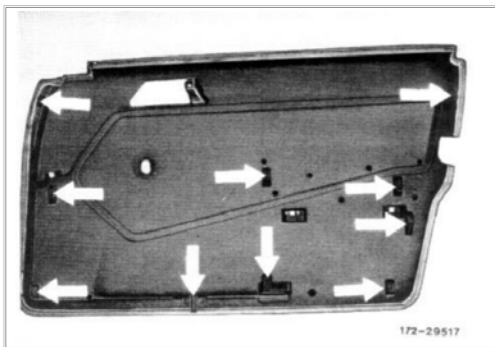

Zoom

Sized for Print

- 8 Introduce door lining from above into plug clamps on window shaft with hooks into inside door plate, while inserting locking knob into door lining.

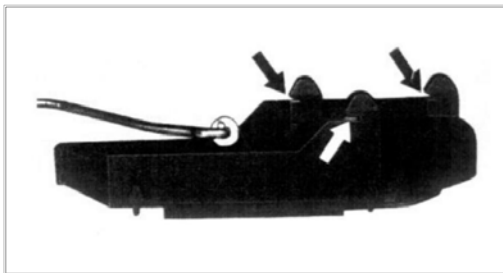

Zoom

Sized for Print

- 9 Engage linkage on door handle and insert door inside actuation on door inside plate (3 slots).
- 10 Fasten hand grip inside with screw.

Note: Screw on hand grip is micro-encapsulated. Either replace or screw in with a screw

locking compound.

11 For further installation proceed vice versa.

© 2008 ALldata LLC. All rights reserved.

[Terms of Use](#)

Select Vehicle | New TSBs | Technician's Reference

Component Search:

 Conversion Calculator

1991 Mercedes Benz 300E (124 Chassis) L6-2960cc 3.0L SOHC (103)


[Vehicle Level](#) → [Body and Frame](#) → [Doors, Hood and Trunk](#) → [Rear Door Panel](#) → [Service and Repair](#) ←

Service and Repair


[Notes](#)

Removal

- 1 Set window in downward position, then remove window crank.

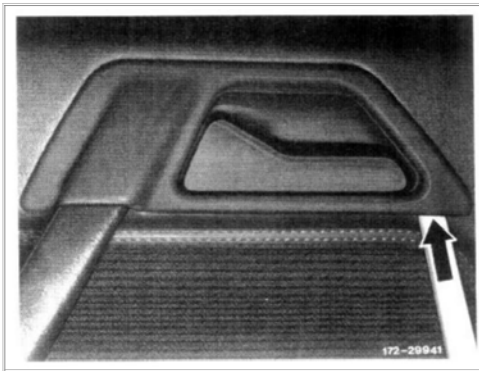


- 2 Force molding from door inside actuation and remove.

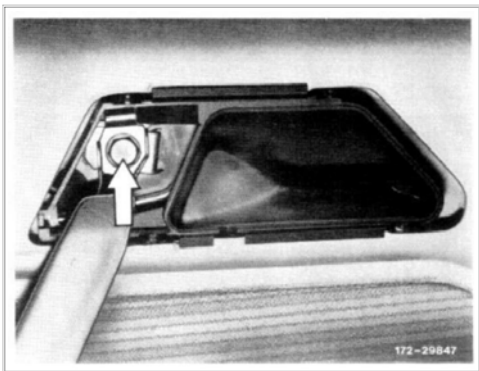

- 3 Unscrew screw on hand grip.
- 4 Disconnect pull rod on door handle.

[Zoom](#)[Sized for Print](#)


- 5 Slip housing of door inside actuation forward and remove.
- 6 Remove ashtray housing on rear side door.

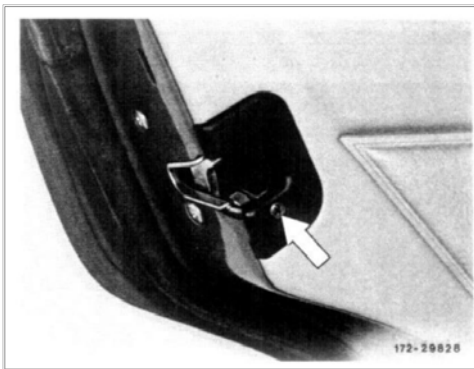[Zoom](#)[Sized for Print](#)


- 7 Remove bordering on door lock.
- 8 Push door lining upward and remove.

Note: If the sealing foil on door inside plate is damaged, replace prior to installing door lining.

Installation

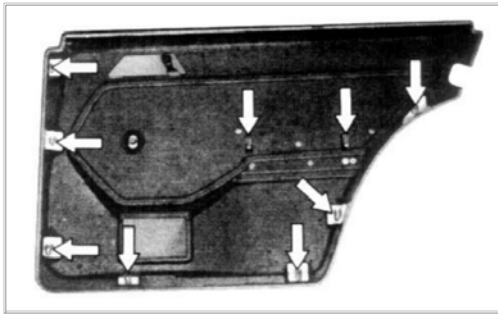[Zoom](#)[Sized for Print](#)

- 9 Introduce door lining from above into plug clamps on window shaft and insert with hook into door inside plate, while inserting locking knob into door lining.

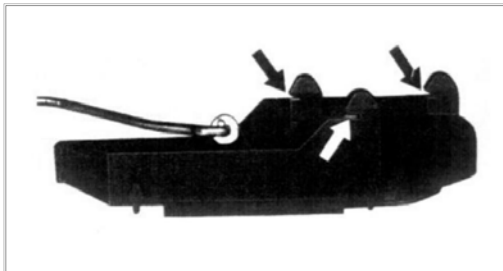[Zoom](#)[Sized for Print](#)

- 10 Engage pull rod on door handle and insert door inside actuation on door inside plate (3 slots).
- 11 Fasten hand grip inside with screw.

Note: Screw on hand grip is micro-encapsulated. Either replace or screw in with a screw locking compound.

- 12 For further installation proceed vice versa.