



[Home](#) | [Account](#) | [Contact ALLDATA](#) | [Log Out](#) | [Help](#)

METRO TOYOTA

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:

OK



[Conversion Calculator](#)

1997 Isuzu Truck Rodeo LS 2WD V6-3165cc 3.2L SOHC (6VD1)

[Vehicle Level](#) → [Maintenance](#) → [Fluids](#) → [Fluid - A/T](#) → [Service and Repair](#) ←


Service and Repair

[Notes](#)

NOTE: There is no need to change the transmission fluid unless the transmission is used under one or more of the following heavy duty conditions. If the vehicle is used under these conditions, change the fluid every **20,000 miles (32,000 km.)** .

- A: Repeated short trips
- B: Driving on rough roads
- C: Driving on dusty roads
- D: Towing a trailer

1. Place a large drain pan under the oil pan.

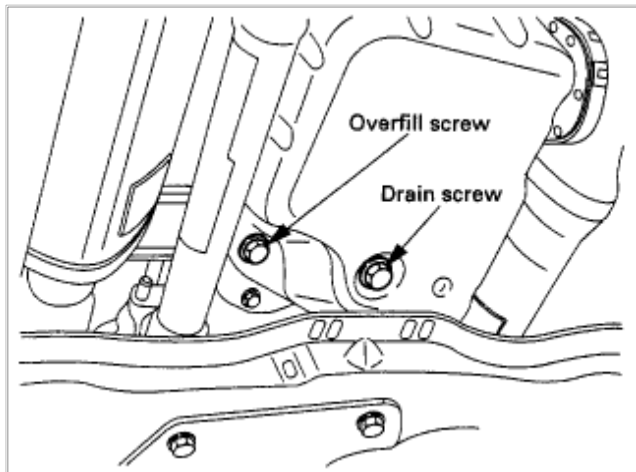

Zoom

Sized for Print

2. Remove the transmission oil drain screw and drain fluid.
3. Tighten drain screw. **Torque: 38 Nm (28 ft. lbs.)** .
4. Remove the transmission overfill screw and fill transmission through overfill screw opening, using DEXRON-III ATF.
5. Let engine idle until a fluid temperature between **32°C (90°F)** and **57°C (135°F)** is reached.
6. Add transmission fluid until it flows out over the overfill screw opening, then close the overfill screw. **Torque: 38 Nm (28 ft. lbs.)** . **NOTE:** Transmission fluid temperature to be check with service tool. [See: Powertrain Management\Transmission Control Systems\Testing and Inspection](#)