


# Positive Crankcase Ventilation Valve: Service and Repair


## POSITIVE CRANKCASE VENTILATION VALVE REPLACEMENT

### REMOVAL PROCEDURE

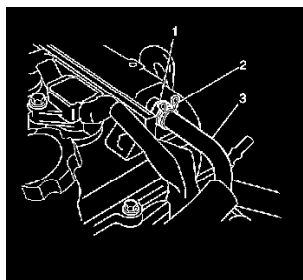

1. Loosen the positive crankcase ventilation (PCV) valve hose clamp (2).
2. Remove the PCV valve hose (3) from the PCV valve.
3. Remove the PCV valve (1) from the cylinder head.

### INSTALLATION PROCEDURE

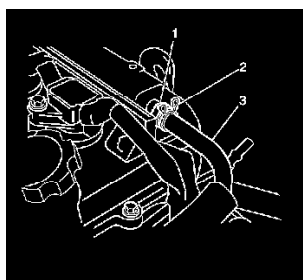

1. Install the PCV valve (1) into the cylinder head.

**NOTE:** Refer to Component Fastener Tightening Notice in Service Precautions.

Tighten the PCV valve to **27 N.m (13 lb ft)**.

2. Connect the PCV valve hose (3) to the PCV valve (1).
3. Secure the PCV valve hose with one clamp (2).