


Ignition Switch: Service and Repair

IGNITION SWITCH

The ignition key must be in the key cylinder for cylinder removal. The key cylinder must be removed first before removing ignition switch.


REMOVAL

1. Remove key cylinder. Refer to previous steps.

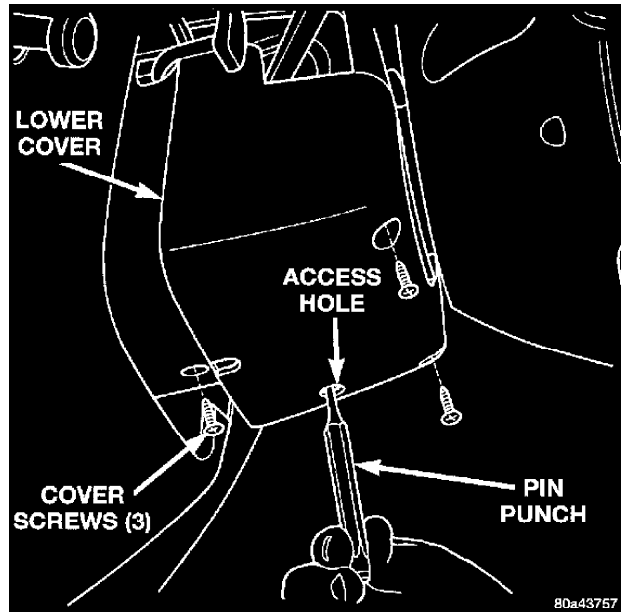


Key Cylinder And Cover Removal

2. Remove lower steering column cover screws and remove cover.

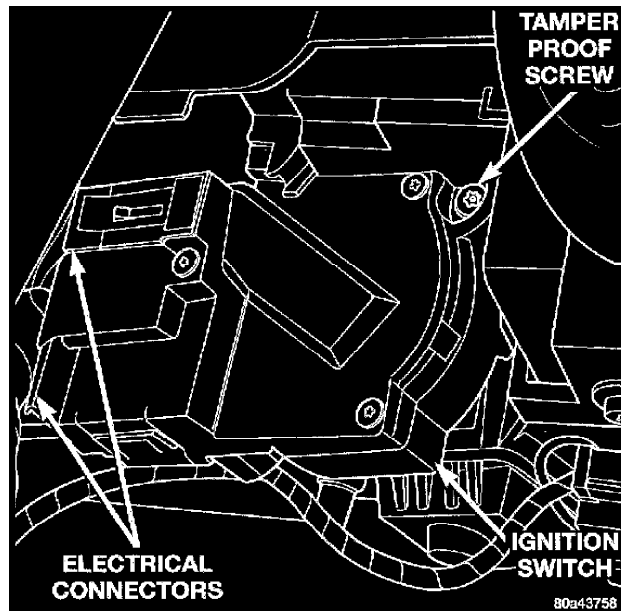

Ignition Switch Removal/Installation


3. Remove ignition switch mounting screw. Use tamper proof torx bit (Snap-On® SDMTR10 or equivalent) to remove the screw.

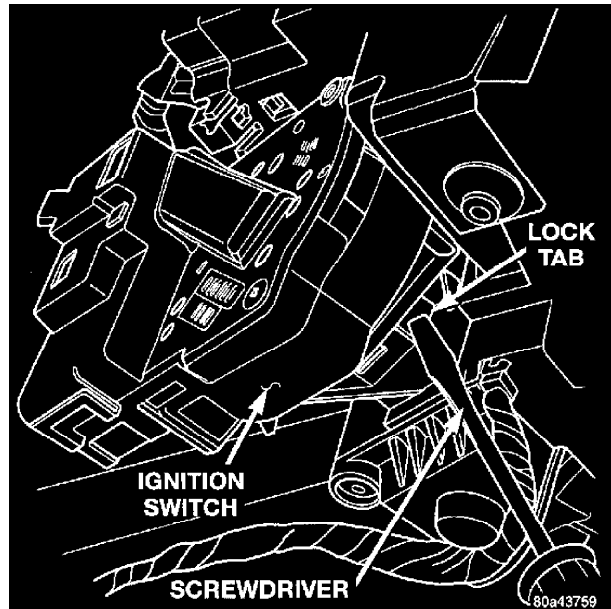

Ignition Switch Lock Tab

4. Using a small screwdriver, push on locking tab and remove switch from steering column.
5. Disconnect two electrical connectors at rear of ignition switch.

INSTALLATION

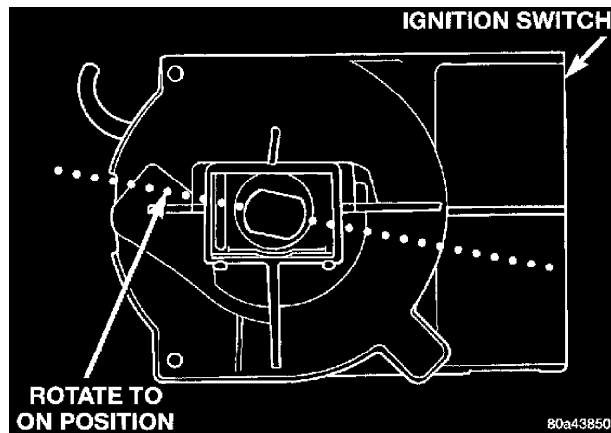

Switch In ON Position

1. Before installing ignition switch, rotate the slot in the switch to the ON position.
2. Connect two electrical connectors to rear of ignition switch. Make sure that locking tabs are fully seated into wiring connectors.
3. Position switch to column and install tamper proof screw. Tighten screw to **3 N.m (26 in. lbs.)**.
4. Install steering column lower cover.